
HIOKI

CLAMP ON POWER LOGGER
PW3365



Eliminate the risk of short-circuits and electrical accidents

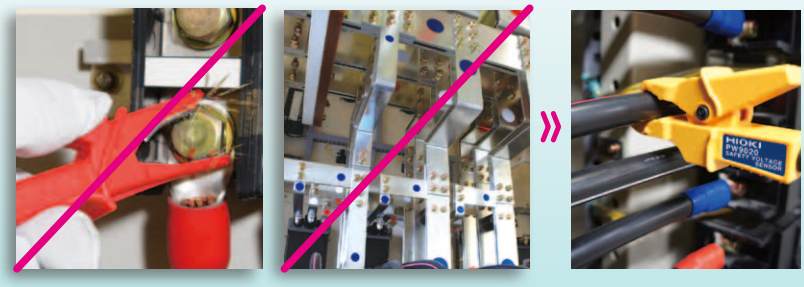

The world's first instrument to offer no-metal-contact power measurement

Free from the risk of short-circuit accidents since no metal comes into contact with energized parts, the Clamp On Power Logger PW3365-20 can measure voltage, current, and power right on the cable, letting you safely test in locations that were dangerous or even impossible in the past.

GERMAN DESIGN AWARD SPECIAL 2016

*For Voltage Sensor PW9020


CE

3 year Warranty

Safe, Easy, Voltage Measurement


The PW3365-20's dedicated voltage sensor delivers the world's first no-metal-contact measurement.


Free yourself from the risk of short-circuits by measuring right on the cable sheath without ever needing to touch metal to energized parts

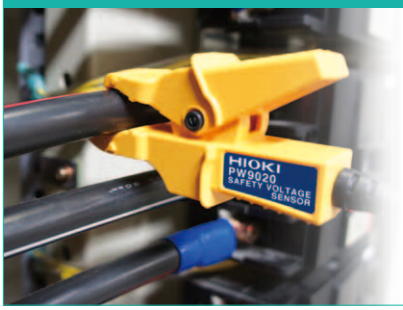



Freely clip either horizontally or vertically

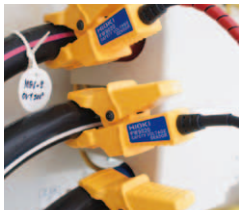

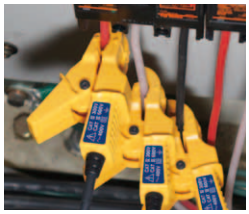

Measure both thick and thin cables


Measure in potentially hazardous locations






Locations without energized parts

Measure on the outside of cables

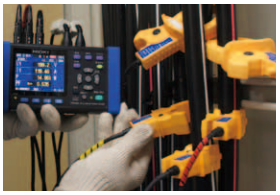


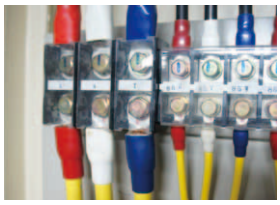

Locations with covered terminals

Measure without removing the covers




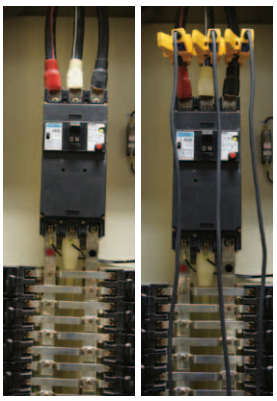


Locations with a risk of electric shock

Measure at safer points

How is voltage measured without any metallic contact?

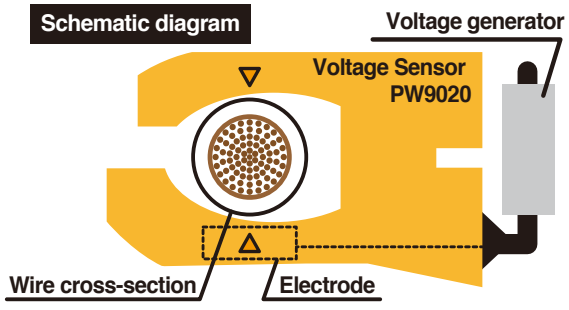

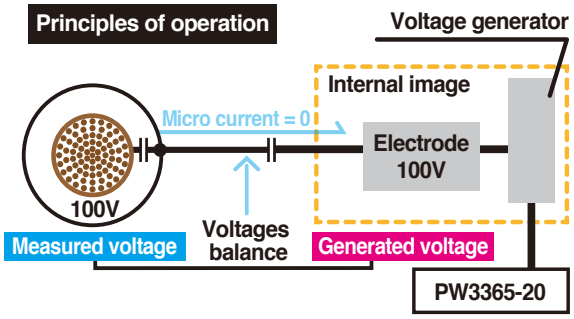

Inside the PW9020 is an electrode (a metal plate). When there is a potential difference between this electrode and the measured line, a minute current flows as a result. By detecting this minute current and generating a voltage such that the current declines to zero, it is possible to accurately measure the voltage without being affected by the outer diameter of the measured cable or its insulation.



Enlarged view of clamp

Actual maximum size : φ30 mm
Actual minimum size : φ6 mm

Compatible conductor diameters

SAFETY VOLTAGE SENSOR PW9020 Specifications

Compatible conductor types	Insulated wires*1 In door PVC or metal parts
Compatible conductor diameters	Finished outer diameter φ6mm to φ30mm
Effective measurement range	90 V rms to 520 V rms
Accuracy	±1.5% rdg. ±0.8 V (combined accuracy with PW3365-20)*2
Effect of phase	Accuracy combined with the PW3365-20 is within ±1.3% (at 50 Hz/60 Hz, f.s. input)
Maximum rated voltage to earth	CATIV 300V / CATIII 600V
Cord length	3m (9.84 ft)
Mass	Approx. 220g (7.8 oz)
Operating temperature and humidity	0°C to 50°C(32°F to122°F), 80% RH or less (no condensation)
Storage temperature and humidity	-10°C to 60°C (14°F to 122°F), 80% RH or less (no condensation)
Dielectric strength	7.06k Vrms AC
Applicable standards	Safety: EN61010, EMC: EN61326

* includes relay box on cord

Soil, residue, or moisture on the insulated wires may result in lower voltage and power values than their true values. Use a dry cloth to remove before measuring.

*1: Shielded wires cannot be measured. The product may not be able to accurately measure multi-core cables or cables that have thick insulation.

*2: For frequencies of 45 Hz to 66 Hz.
Effects of humidity: Add the following to the combined accuracy (for voltage, power, and phase) with the PW3365-20
Accuracy within ±1% f.s., phase within ±1°,
measuring an insulated wire at a humidity of 70% to 80% RH
Effects of adjacent wires: Add the following to the combined accuracy (for voltage and power) with the PW3365-20
Within ±1% f.s. while a wire with a phase difference of 400 V is in contact with the grip

Review Results

At the Worksite

Display measured values as a graph and evaluate results at a glance

Measured values can be displayed as a graph, which is convenient when using the instrument in power management applications. Since you can statistically review not only the measured value at that moment, but also measured values that have been recorded, it's easy to check values on the spot.

Parameter List and Waveform Displays


Select a display with the screen selection button

Review a list of principal test parameters, including voltage, current, power, frequency, and energy


Select the WAVE display to check voltage and current waveforms.



List display screen

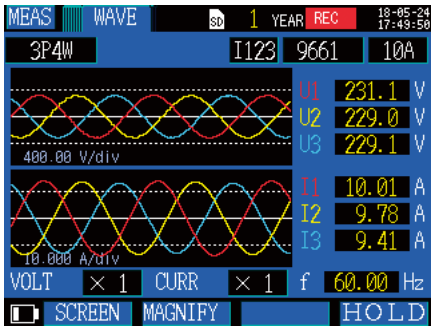

Waveform display screen

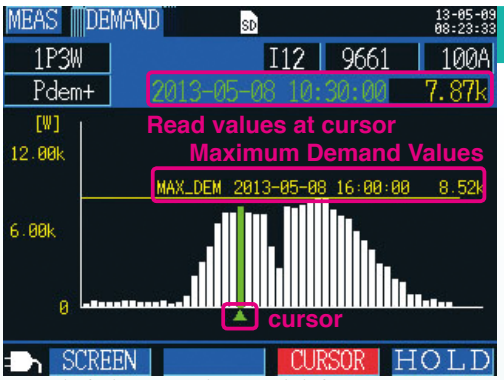

Bar graph of values measured over a period of 24 hours at a 30-minute interval

Demand Graph Display

Display demand value trends


It's easy to check the maximum demand value and the time at which it occurred.

Particularly useful in power management applications

Evaluate Photovoltaic Generation Capabilities



You can create a bar graph that makes it obvious whether power is being bought or sold by switching the active power demand value display from consumption to regeneration

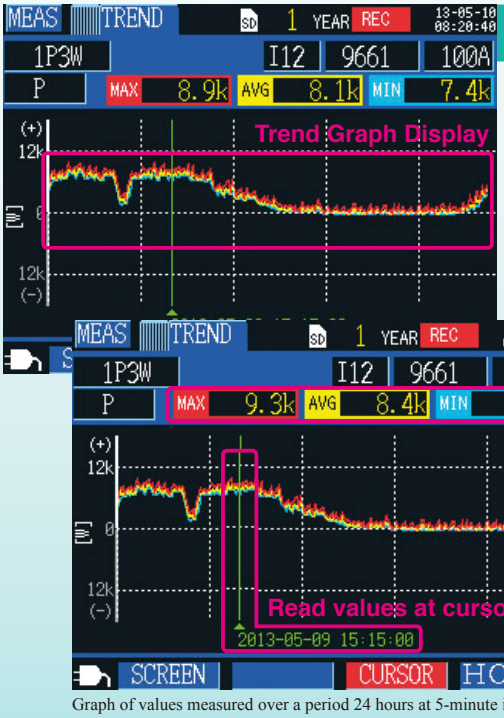

Graph of values measured over a period 24 hours at 5-minute intervals

Trend Graph Display

* Except for demand


Choose one measured parameter to create a time-series display as a graph

Monitor power variations to check for connections between equipment operating status and power consumption.


Display the maximum, minimum, and average values at the cursor position

Identify these parameters right on the time-axis graph display

Example
Power trend graph display

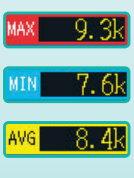

Capture and record all fluctuations

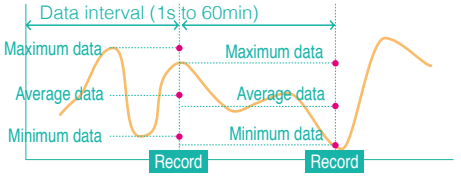

Set the power logger to save all parameters to record the maximum, minimum, and average values during the set recording interval.

Configure Settings with

Quick Set

Graphical, easy-to-understand guidance for connection procedures


Quick Setup guides you through the process of setting up the instrument for measurement, right up to starting measurement, on the screen to simplify set work. Since any mistaken connections will trigger a FAIL message, the feature also helps prevent measurement mistakes. If you receive a FAIL result, the instrument will also indicate the location of the problem.



Setup Flow (example: 3P4W)


STEP1 Quick Set START / Choose the wire type

STEP2 Connect the leads to the PW3365-20

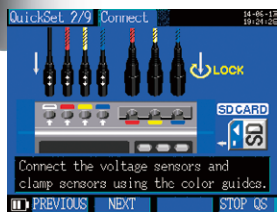




STEP3 Connect the voltage sensor

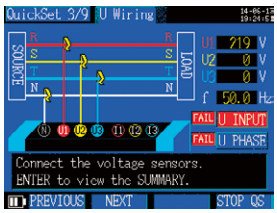




STEP4 Connect the clamp sensors

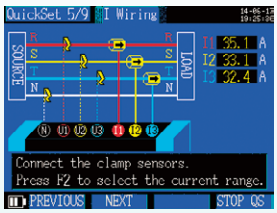




STEP5 Select the current range

STEP6 Check wire connection status

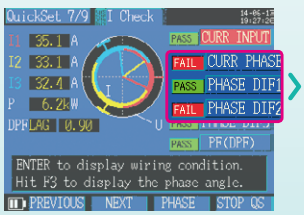

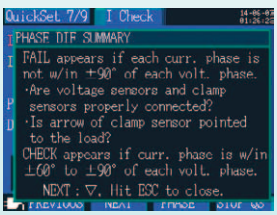

If you receive a FAIL result

Highlight the FAIL message with the cursor and press ENTER to view information about where the connection needs to be corrected.


Measurement

Miswiring Example (Clamp Orientation)

Neither power nor power factor can be measured accurately with the clamp in the wrong orientation.


Correct Orientation

Point the arrow toward the load side

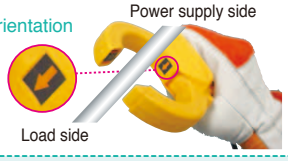

FAIL

The I vector's phase direction is opposite the determination area.

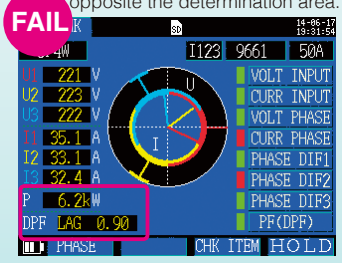

P: 6.2 kW
Power displayed value is too low

PASS

The I vector's phase direction is within the determination area.



P: 17.8 kW

CURR PHASE Red means : FAIL VOLT PHASE Green means : PASS


Safely and Easily

Measure Harmonic

NEW

Measure harmonics with no-metal-contact voltage measurement technology

This useful feature has come to the PW3365, enabling the instrument to measure voltage and current harmonics in addition to power. Hioki's no-metal-contact voltage measurement technology lets you safely and easily measure THD and the dominant 5th- and 7th-order harmonics.

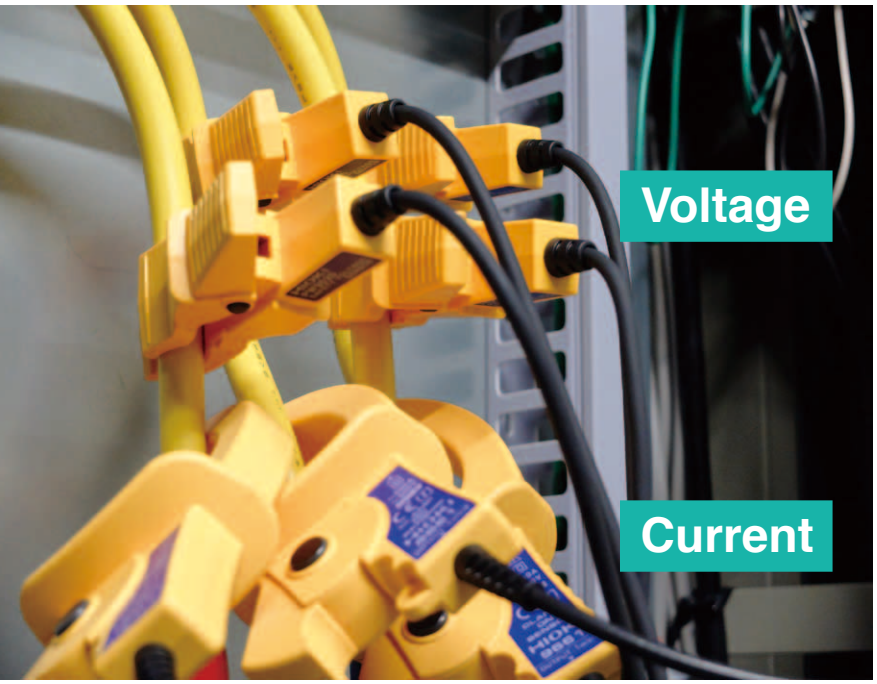

Measurement parameters

- Harmonic voltage
- Harmonic current
- Voltage total harmonic distortion
- Current total harmonic distortion

Screen displays

- Voltage and current levels
- Voltage and current content percentage
- Graph display
- List display


Harmonic Display

Display harmonics up to the 13th order


Present harmonic RMS values and content percentages as a list of numerical values or graph and display total harmonic distortion ratio.

The PW3365 can analyze voltage and current harmonic components from the fundamental wave to the 13th order on 50 Hz/60 Hz power lines.



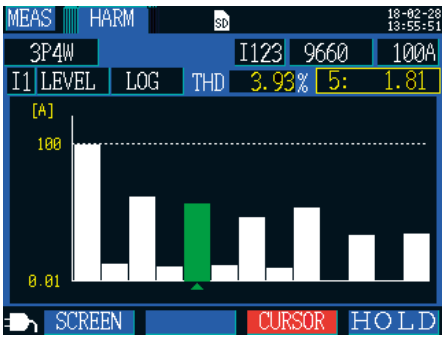

Harmonic Graph Display

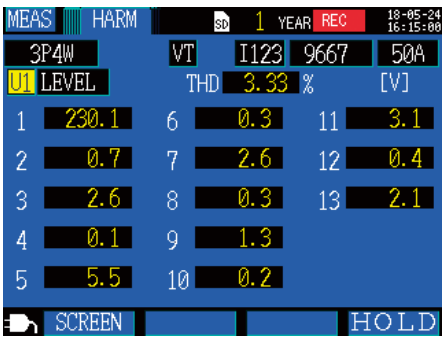

Harmonic Value List Display


You can save maximum, average, and minimum values in binary format for each time interval to the instrument's SD card.

The Power Logger Viewer SF1001 is required in order to display data on a computer.



Time-series display of harmonics


Select the fundamental wave, 3rd order, or 5th order for current harmonics to display a time-series graph.

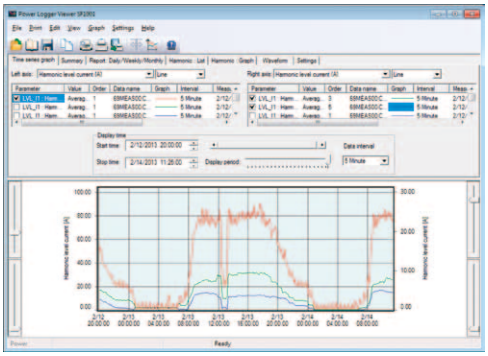

What causes harmonics?


Many electric devices incorporate power circuits with capacitor input. Such devices have rectification circuits to convert the AC power supply to DC power, and distortion in the resulting voltage and current waveforms causes harmonics.

Power circuits that distort waveforms



Typical power circuit

Voltage waveform and current waveform

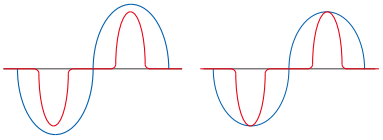


Current flows only near the peak of the voltage waveform, resulting in a voltage drop that flattens the peak portion of the voltage waveform.




Analysis points

Waveform as measured by an instrument designed for observing harmonics

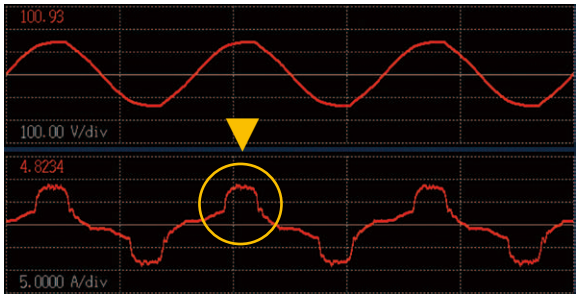


Current flows only near the peak of the voltage waveform

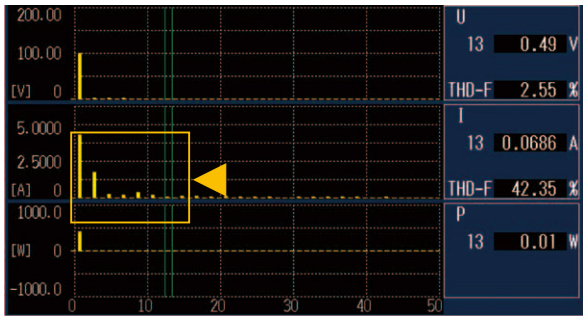


THD and dominant orders



Waveform as measured by the PW3365

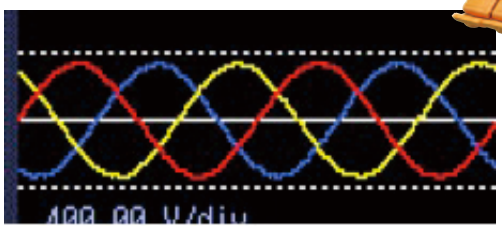

The PW3365 displays content percentages for each harmonic voltage order as well as the voltage total harmonic distortion (THD).

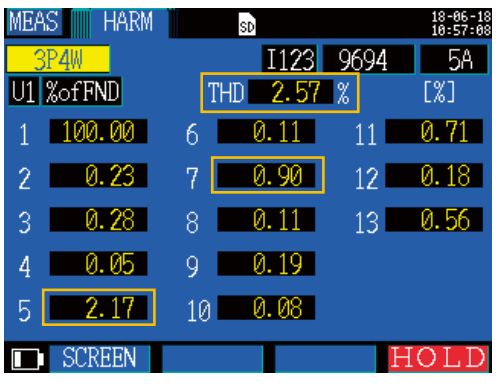

The instrument is especially useful for measuring the dominant 5th and 7th orders.

Convenient Functions

For the Worksite

More Uses for the PW3365-20


The Hioki PW3365-20 is not just a power logger. Added-value features and functions let you meet many other electrical testing applications.

Leakage Current Measurement

Requires optional clamp-on leak sensor


Measure power + 1-channel of leakage current

Example : 3P3W2M+1-channel leakage current

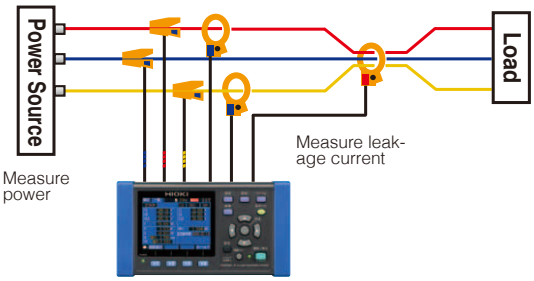

With the ability to calculate and process data every 200ms, you can do simple checks of intermittent leakage current. Choose from average, maximum and/or minimum value of the measured interval.


Leakage current results

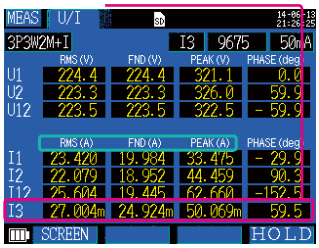

By capturing the RMS of the fundamental wave, you can also identify the leakage current of the 50/60Hz component.

RMS (A)	RMS that includes harmonic components
FND (A)	RMS of fundamental wave
PEAK (A)	Peak value (waveform peak)


Measure 3 channels of leakage current

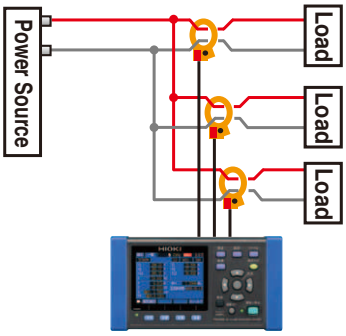


Control and Monitor from a Remote Location

Use a LAN cable to connect the PW3365-20 to a personal computer for real-time remote monitoring and measurement display on a web browser.


Files recorded in the Clamp On Power Logger's internal memory or SD card are accessible via a LAN or USB connection, and are downloadable using the free PW3365-20 Setup and Download Software

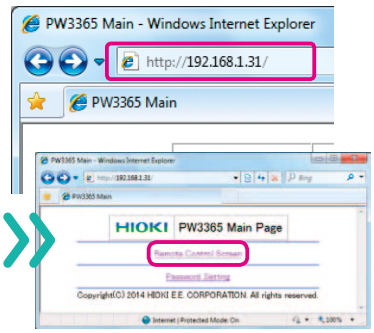

Enter the IP address in the browser.

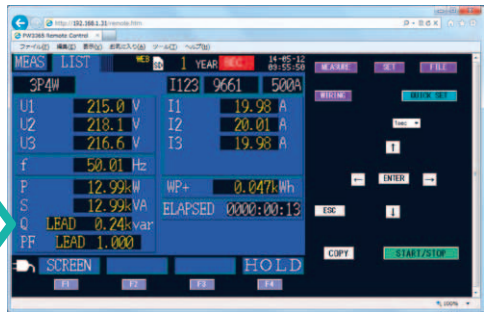


Display the power logger's screen and make adjustments virtually by clicking the buttons and entering new information.

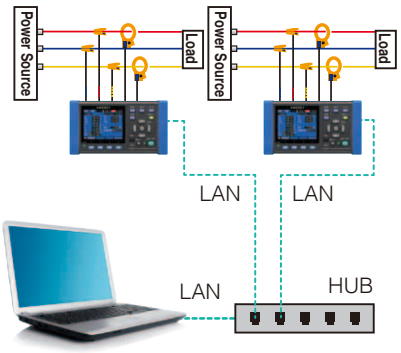

Simultaneous Measurements

Measure three single-phase, 2-wire circuits in the same system at the same time.

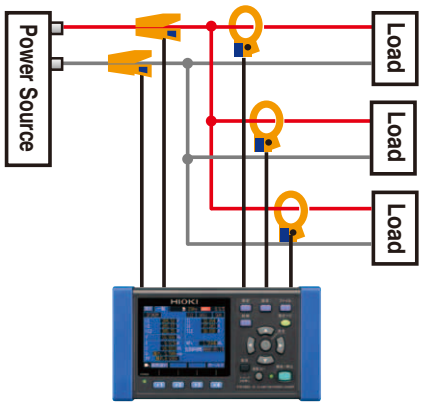

Other Convenient Features



Compact, lightweight

Small form factor lets you set the power logger even inside cramped cubicles



Battery power

Power the instrument for about five hours with batteries if the power goes out

Outage recovery

Resume recording automatically following recovery from a power outage

Key lock function

Lock the buttons to prevent erroneous operation

Display hold

Freeze the displayed value for easier reading

Save & Analyze

Measurement Results on PC

Easily download and interpret data on a PC

Download the measurement results to a computer via the power logger's LAN or USB interface or its SD card. Simultaneously monitor all data in real-time, control your device and download the recorded data remotely with GENNECT One software. For more detailed analysis, Hioki's optional SF1001 application software is recommended.

Storage media for data

SD card 2GB

Stores up to one year's data that is acquired at one minute intervals. Performance cannot be guaranteed on storage media other than SD cards sold by Hioki.



The SD port has a cover

Loading data

SD card 2GB

LAN interface

USB interface



Available Recording Time

Interval time	Save Time	
	Saving of harmonic data: OFF	Saving of harmonic data: ON
1 seconds	15.6 days	2.8 days
2 seconds	31.2 days	5.5 days
5 seconds	77.9 days	13.8 days
10 seconds	155 days	27.6 days
15 seconds	233 days	41.5 days

Interval time	Save Time	
	Saving of harmonic data: OFF	Saving of harmonic data: ON
30 seconds	1 year	82.9 days
1 minutes	1 year	165 days
2 minutes	1 year	331 days
5 minutes	1 year	1 year
More than 10 minites	1 year	1 year


[Save conditions for above figures]
Measurement target : 3P4W
Storage media : Z4001 2-GB SD card
Saved parameters : All data: average, maximum, and minimum values
Screen copy saving : OFF Waveform save : OFF

In all cases, the maximum single file size for measurement data is about 200 MB. When this is exceeded, a new file is created and saving continues.
The maximum recording period is one year.

GENNECT One SF4000 (available as a free download from the HIOKI website)


PC Application Program
GENNECT One

Download the GENNECT One SF4000 software from the Hioki website to your PC

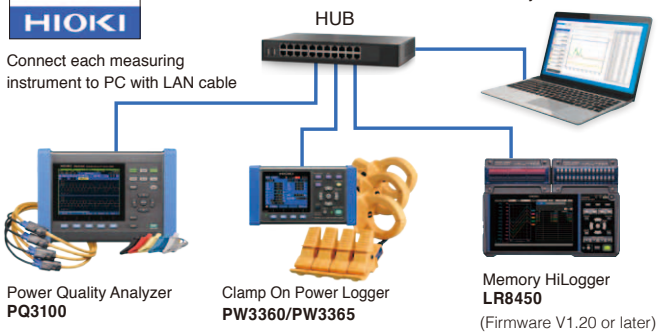

Real-time measurement (logging)


-Regularly (as quickly as once every second) collect measurement data from up to 15 LAN-connected measuring instruments and display it on a computer.
-Simultaneously capture power data from a power meter and temperature or flow rate data from a data logger.

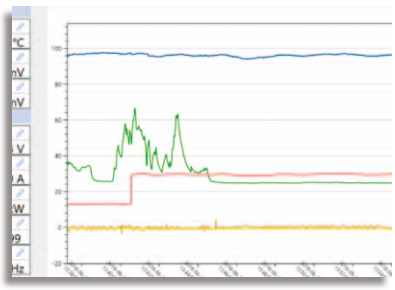

Remote control (HTTP)

Control and configure LAN-connected measuring instruments in remote locations from a computer

The application displays a virtual instrument and allows you to control it directly with the mouse.

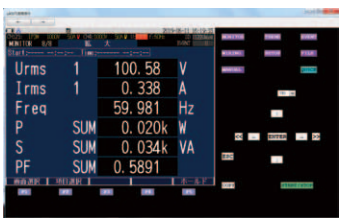


You can also easily change instrument settings and control the instrument, for example to start and stop measurement

Automatic file transfer (FTP)

Automatically transfer measurement files from LAN-connected instruments to a computer

This function lets you acquire data in real time on a PC, including data created when the instrument's trigger is activated and measurement files that are automatically generated on a daily basis. Example uses include capturing abnormal phenomena with an instrument installed in the field and automatically acquiring daily power consumption data on a PC.

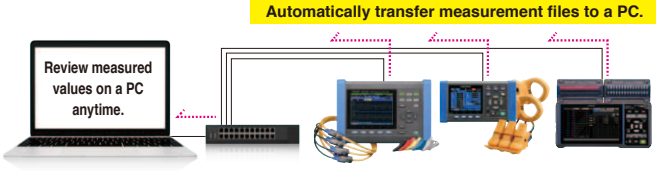

Downloading GENNECT One SF4000 (for Windows)

HIOKI website > Search | Model No. (Order code) | SF4000 | **Search**

Enter the model number in the search field to download the software to get started!

Save & Analyze

Measurement Results on PC


Use Hioki's Power Logger Viewer to gather, view, and compare data

Assessing the status quo is the first step in saving energy. Ascertain trends by simultaneously measuring the energy needed to maintain environmental conditions and the energy needed for production by using as many individual instruments as possible throughout plants and on individual department floors. Hioki's Power Logger Viewer SF1001 lets you download data saved at sites in the field to instruments' SD cards and internal memory to a computer to display, tabulate, analyze, and incorporate it into printed reports.


Collect data that reflects changes in multiple locations and compare to gain an understanding of the big picture

Example data use case 1

Simultaneously measure and record loads using three PW3365s.

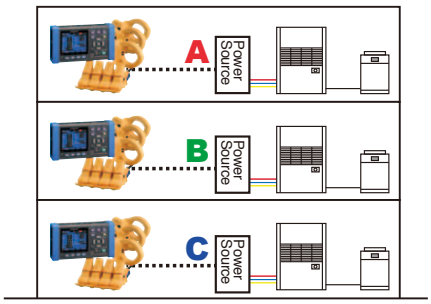

Building A

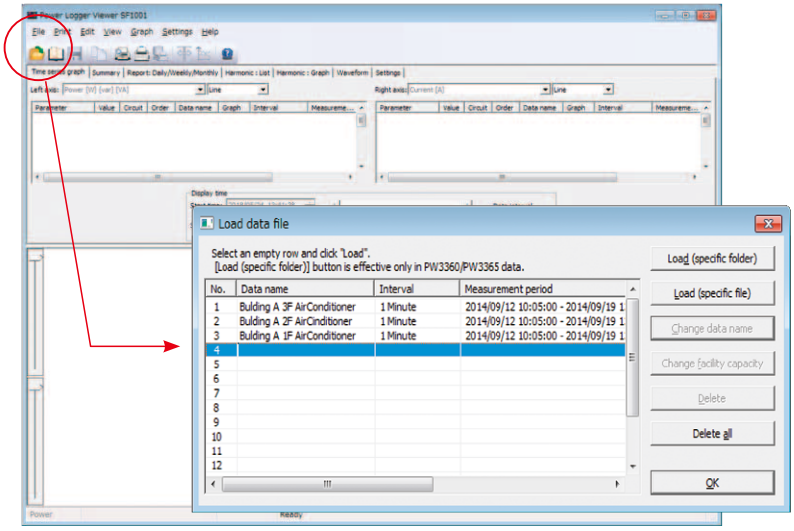

You can load data from multiple instruments.



Group power consumption data for multiple locations together and display on a single graph so that you can readily identify the times and locations that are characterized by high power consumption.

Display easy-to-understand time-series graphs

Choose a line graph or bar graph depending on your purpose.


Consolidate data

Consolidate up to 16 sets of data into a single file so that it can be loaded more quickly.

Example data use case 2

Display data for measurements made at different times on a single graph

Functionality for changing the date associated with a set of data lets you change the time of data to facilitate comparison so that you can identify the benefits of energy-saving measures at a glance.

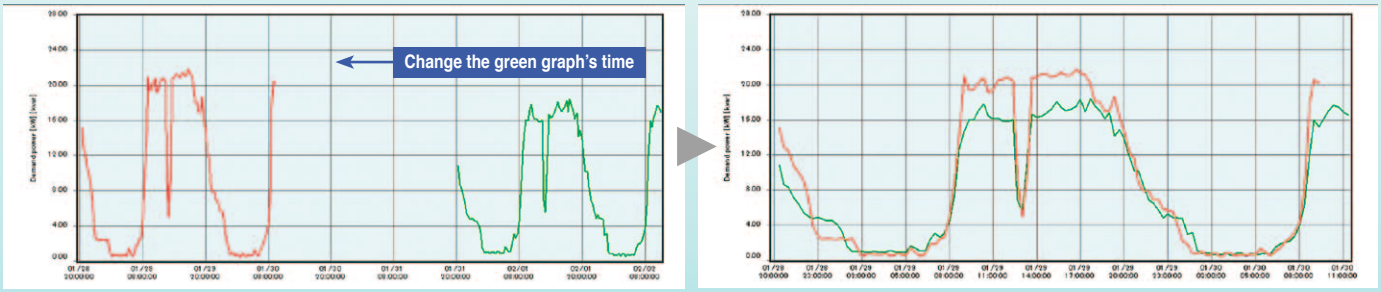

Generate daily and weekly reports to review survey results and benefits

Daily report

	Time	Pdem+[kW]	WP+[kWh]	U1[V]	U2[V]	U12[V]	I1[A]	I2[A]	I12[A]
3	00:30:00	3.955	50.9684	206.08	207.43	205.83	14.220	16.392	14.989
	01:00:00	0.105	51.0219	207.13	208.41	206.71	0.425	0.314	0.461
	01:30:00	4.152	53.0977	207.66	209.02	207.31	14.521	16.854	15.530
	02:00:00	2.826	54.5106	207.34	208.67	206.98	10.062	11.834	10.995
	02:30:00	0.068	54.5443	207.71	208.94	207.31	0.289	0.137	0.300
	03:00:00	4.527	56.8079	207.45	208.59	206.94	15.917	18.247	17.028
	03:30:00	2.044	57.8296	208.10	209.22	207.59	7.256	8.296	7.837
	04:00:00	0.464	58.0617	208.12	209.24	207.65	1.701	1.762	1.836
	04:30:00	4.598	60.3609	208.28	209.43	207.88	16.181	18.551	17.252
	05:00:00	1.883	61.2024	208.08	209.27	207.84	6.100	7.058	6.639
	05:30:00	0.560	61.4823	207.99	209.11	207.83	2.073	2.164	2.164
	06:00:00	4.524	63.7441	207.63	208.80	207.53	16.319	18.256	16.793
	06:30:00	1.032	64.2603	207.13	208.37	207.28	3.935	4.402	4.075
	07:00:00	1.715	65.1179	206.57	207.85	206.86	6.280	6.828	6.243
	07:30:00	4.069	67.1522	206.63	207.96	206.87	14.970	16.660	15.109
	08:00:00	0.298	67.3012	208.16	209.63	208.59	1.188	1.219	1.225
	08:30:00	3.202	68.9023	206.53	208.05	206.85	11.594	12.861	11.577
	09:00:00	3.419	70.6120	206.16	207.85	206.35	12.501	14.411	12.950
	09:30:00	1.962	71.5933	205.27	206.97	205.33	7.337	8.961	8.160
	10:00:00	2.057	72.6220	204.93	206.69	204.97	7.643	9.309	8.484
	10:30:00	2.405	73.8247	205.46	207.14	205.47	8.857	10.504	9.611
	11:00:00	3.874	75.7616	204.94	206.63	204.95	13.900	15.829	14.413
	11:30:00	3.581	77.5519	204.77	206.58	204.91	12.952	14.927	13.483
	12:00:00	3.750	79.4268	204.64	206.45	204.72	13.459	15.426	13.949
	12:30:00	4.047	81.4501	205.12	206.82	205.17	14.471	16.392	14.845
	13:00:00	2.969	82.9345	204.58	206.26	204.80	10.729	12.421	11.345
	13:30:00	2.276	84.1226	205.92	207.68	206.00	8.659	10.016	9.415
	14:00:00	4.661	86.4528	206.03	207.79	206.09	15.953	18.397	16.378
	14:30:00	5.327	89.1163	205.78	207.55	205.81	18.356	20.610	18.650
	15:00:00	1.517	89.8750	205.98	207.69	205.95	5.365	5.959	5.562
	15:30:00	4.039	91.8942	207.02	208.68	207.02	13.800	15.454	13.950
	16:00:00	4.528	94.1581	206.70	208.40	206.70	15.909	17.784	16.257
	16:30:00	3.462	95.8890	206.69	208.41	206.71	12.381	14.159	12.920
	17:00:00	2.386	97.0821	206.95	208.70	207.08	8.733	10.319	9.363
	17:30:00	3.426	98.7950	207.32	209.16	207.48	12.224	14.203	12.798
	18:00:00	3.514	100.5520	206.81	208.58	206.88	12.589	14.621	13.204
	18:30:00	3.490	102.2970	207.17	208.94	207.15	12.372	14.560	13.209
	19:00:00	3.478	104.0360	207.31	209.11	207.33	12.319	14.618	13.290
	19:30:00	3.447	105.7800	207.55	209.28	207.48	12.181	14.473	13.099
	20:00:00	2.124	106.8210	206.80	208.49	206.76	7.650	9.092	8.193
	20:30:00	1.731	107.6870	205.76	207.38	205.71	6.045	6.806	6.149
	21:00:00	4.295	109.8340	206.22	207.81	206.20	15.284	17.667	15.799
	21:30:00	2.556	111.1120	206.03	207.60	206.04	9.373	11.393	10.163
	22:00:00	1.894	112.0590	207.52	209.03	207.43	7.043	8.827	7.919
	22:30:00	1.900	113.0090	205.77	207.28	205.74	7.143	8.949	7.971
	23:00:00	2.642	114.3300	206.72	208.22	206.61	9.678	11.767	10.513
	23:30:00	2.886	115.7730	206.99	208.42	206.78	10.524	12.691	11.420
	24:00:00	2.861	117.2040	207.62	209.10	207.32	10.269	12.640	11.429
	Total								
	Average		2.842		206.65	208.18	206.59	10.182	11.785	10.724
	Maximum demand		5.327	117.2040	208.28	209.63	208.59	18.356	20.610	18.650
	Time of maximum demand		2014/09/13 14:30:00	2014/09/13 24:00:00	2014/09/13 04:30:00	2014/09/13 08:00:00	2014/09/13 09:00:00	2014/09/13 14:30:00	2014/09/13 14:30:00	2014/09/13 14:30:00
	Load factor	[%]	53.35							
	Demand factor	[%]	53.27							
	Facility capacity	[kW]	10.000							

Weekly report

	Time	Pdem+[kW]	WP+[kWh]	U1[V]	U2[V]	U12[V]	I1[A]	I2[A]	I12[A]
	00:00:00 – 24:00:00	2.842	117.2040	206.65	208.18	206.59	10.182	11.785	10.724
	00:00:00 – 24:00:00	2.956	188.1510	206.56	207.98	206.57	10.778	12.501	11.240
	00:00:00 – 24:00:00	3.017	260.5560	206.28	207.77	206.25	10.978	12.828	11.609
2014/09/16	00:00:00 – 24:00:00	3.724	349.9250	206.21	207.66	205.85	12.041	14.207	13.299
2014/09/17	00:00:00 – 24:00:00	3.076	423.7440	206.27	207.52	205.92	10.600	12.411	11.491
2014/09/18	00:00:00 – 24:00:00	2.663	487.6580	206.70	207.96	206.40	9.213	10.720	9.882
2014/09/19	00:00:00 – 24:00:00	1.281	518.3920	207.01	208.31	206.76	9.369	9.679	9.890
Total									
Average		2.990		206.49	207.88	206.30	10.445	12.183	11.169
Maximum demand		5.667	518.3920	208.60	209.74	208.69	19.902	22.177	19.715
Time of maximum demand		2014/09/14 12:30:00	2014/09/19 13:00:00	2014/09/14 04:30:00	2014/09/14 04:30:00	2014/09/14 08:00:00	2014/09/14 12:30:00	2014/09/14 12:30:00	2014/09/14 12:30:00
Load factor	[%]	52.75							
Demand factor	[%]	56.67							
Facility capacity	[kW]	10.000							

Example data format

Choose from four display formats

Form — Display data for a user-specified interval as a summary form.

Daily report — Tabulate data by demand time and display a form summarizing a one-day period.

Weekly report — Tabulate data by day and display a form summarizing a one-week period.

Monthly report — Tabulate data by day and display a form summarizing a one-month period.

Check average and maximum values as well as the time at which the maximum value occurred

(Maximum values for daily, weekly, and monthly reports indicate maximum values as tabulated by demand time.)

When demand power is selected, the following quantities are calculated:

Load rate and demand rate

Date	Time	Pdem+[kW]	WP+[kWh]
Average		2.990	
Maximum demand		5.667	518.3920
Time of maximum demand		2014/09/14 12:30:00	2014/09/19 13:00:00
Load factor	[%]	52.75	
Demand factor	[%]	56.67	
Facility capacity	[kW]	10.000	

WP+ [kWh]: Active energy


Active energy (consumption) from the start of recording

Pdem+ [kW]: Active power demand value


Average active power value (consumption) for each interval

Display harmonics and waveform data, convert to CSV format, and save screenshots


Configure the PW3365's recording settings to save harmonic data and display harmonics using the SF1001.

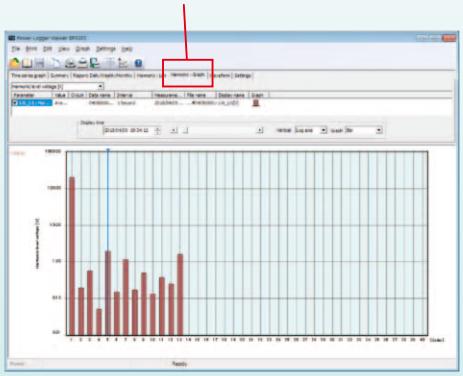

Configure the PW3365's settings to save waveforms and display them using the SF1001.

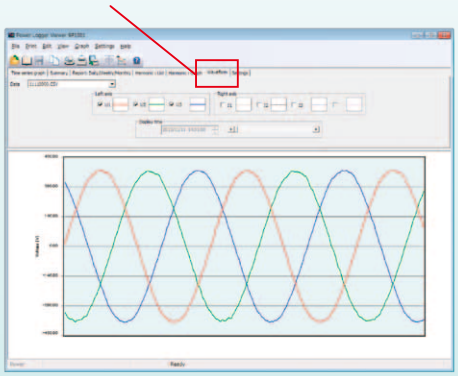


Convert binary data and save as a CSV file.

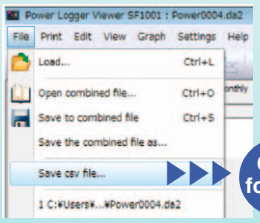

Binary format

- **Harmonic data**
- **Waveform data**

CSV format

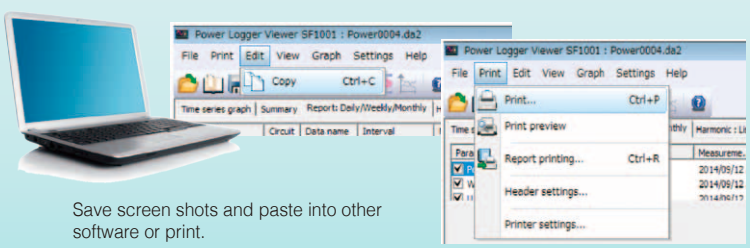

Save screen shots and paste into other software or print.

PW3365-20 Specifications

No dirt or moisture on insulated wire or voltage sensor,
(Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 6 months)

Measurement

Number of input channels		Voltage: 3 channels / Current: 3 channels
Measurement targets (50/60Hz)		Single-phase 2-wire (1P2W, 1P2W × 2 circuits, 1P2W × 3 circuits) Single-phase 3-wire (1P3W, 1P3W+I, 1P3W1U, 1P3W1U+I) Three-phase 3-wire (3P3W2M, 3P3W2M+I, 3P3W3M/Y-wiring only) Three-phase 4-wire (3P4W), Current only: 1 to 3 channels
Simultaneous power/current measurement modes		1P3W+I : 1 power circuit and 1 current channel 3P3W2M+I : 1 power circuit and 1 current channel
Measurement items	Voltage	RMS value, fundamental wave value, waveform peak (absolute value), fundamental wave phase angle, frequency (U1)
	Current	RMS value, fundamental wave value, waveform peak (absolute value), fundamental wave phase angle
	Power	Active power, reactive power, apparent power, power factor, (with lag/lead display) or displacement power factor (with lag/lead display), active energy (consumption, regeneration, regeneration), reactive energy(lag, lead) Energy cost display (per-kWh price × power consumption)
	Demand	Active power demand value (consumption, regeneration), reactive power demand value (lag, lead), active power demand quantity (consumption, regeneration), reactive power demand quantity (lag, lead), power factor demand value
	Harmonics	Harmonic voltage, harmonic current, voltage total harmonic distortion (THD-F or THD-R), current total harmonic distortion (THD-F or TDH-R)
Voltage range		Display range: 5 V to 520 V (less than 5 V displays as 0 V) (harmonic voltage value of 0 indicated for all orders when voltage RMS value is 0)
		Effective measurement range: 90 V rms to 520 V rms, peak: ±750 V peak [OVER] indicates over-range warning
Current ranges	Load current	CLAMP ON SENSOR 9660 : 5/10/50/100 A
		CLAMP ON SENSOR 9661 : 5/10/50/100/500 A
		CLAMP ON SENSOR 9669 : 100/200/1 kA
		CLAMP ON SENSOR 9694 : 500 m/1/5/10/50 A
		CLAMP ON SENSOR 9695-02 : 500 m/1/5/10/50 A
		CLAMP ON SENSOR 9695-03 : 5/10/50/100 A
		AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 : 50/100/500 A (500A range)
		AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 : 500/1 k/5 k A (5000A range)
	Leakage current	LEAK CLAMP ON SENSOR 9675 : 50 m/100 m/500 m/1/5 A
		LEAK CLAMP ON SENSOR 9657-10 : 50 m/100 m/500 m/1/5 A
		Total display range: Within 0.4 to 130% of the range (zero is suppressed for less than 0.4%) (harmonic current value of 0 indicated for all orders when current RMS value is 0)
		Effective measurement range: Within 5 to 110% of the range [OVER] indicates over-range warning
Power ranges		200.00 W to 6.0000 MW Depends on voltage/current combination and measured line type (see Measurement Range Configuration Tables)
		Total display range: Within 0 to 130% of the range ("0W" display indicates zero rms voltage and/or current)
		Effective measurement area: Within 5 to 130% of the range
Measurement accuracy (50/60Hz)		Voltage : ±1.5% rdg. ±0.8 V (combined accuracy with PW3365-20 + PW9020) Current : ±0.3% rdg. ±0.1% f.s. + clamp sensor accuracy Active power : ±2.0% rdg. ±0.3% f.s. + clamp sensor accuracy (power factor = 1)
Calculations		RMS calculation/ fundamental wave calculation
VT ratio settings	Any	0.01 to 9999.99 — Selections: 1/60/100/200/300/600/700/1000/2000/2500/5000
CT ratio settings	Any	0.01 to 9999.99 — Selections: 1/40/60/80/120/160/200/240/300/400/600/800/1200
Input methods		Voltage: Isolated inputs using Voltage Sensor PW9020 Current: Isolated input using a clamp-on sensor
Display update rate		Approx. 0.5 sec (except when accessing SD card or internal memory, or during LAN/USB communication)
Measurement method		Digital sampling and zero cross synchronization calculation method Sampling: 10.24 kHz (2048 points) Calculation processing 50 Hz: Continuous, gapless measurement at 10 cycles 60 Hz: Continuous, gapless measurement at 12 cycles

*1 For individual clamp sensors' accuracy and combined accuracy figures, see pages 14 and 15.

Harmonic Specifications

Standard	IEC 61000-4-7:2002 (but without harmonics for intermediate orders)
Window width	50 Hz: 10 cycles; 60 Hz: 12 cycles (with interpolation)
Analyzed orders	Up to 13th order
Analysis parameters	Harmonic levels: Voltage and current harmonic level for each order (With 3P3W2M connection, U12 and I12, which are calculated as part of third channel computations, are not displayed.) Harmonic content percentages: Voltage and current content percentages for each order; total harmonic distortion: voltage and current (THD-F or THD-R)
Measurement accuracy	Harmonic level Voltage PW3365 alone: ±5% rdg. ±0.2% f.s. Combined accuracy for PW3365 and PW9020: ±30% rdg. ±3% f.s. (input for each order up to 5% of the fundamental wave, THD-F up to 10%) Current ±5% rdg. ±0.2% f.s. + sensor accuracy Total harmonic distortion: Accuracy not defined

Screen Display

List	Voltage, current, frequency, active/apparent/reactive power power factor, integrated power use, elapsed time
U/I	RMS value, fundamental wave value, waveform peak, phase angle
Power	Per-channel and total active power, apparent power, reactive power,power factor
Integ	Active energy, reactiv energy, recording start time recording stop time, elapsed time, energy cost
Demand	Active power demand value, reactive power demand value power factor demand value
Waveform	Displays voltage and current waveform
Zoom	Enlarged view of 4 user-selected parameters
Trend	For one selected measurement item (not including harmonics other than demand and THD) displays maximum, average and minimum values
Harmonics	Displays voltage and current levels and content percentages as a graph or list

Recording

Save destination	SD Card, internal memory (capacity: approx. 320 KB)
Save interval time	1/2/5/10/15/30 seconds, 1/2/5/10/15/20/30/60 minutes Available storage time is displayed on the PW3365-20's setting screen
Save items	Measurement save : Average only/all (without harmonics) Average only/all (with harmonics) Screen save : Saves the displayed screen as a BMP at a fixed interval*1 Waveform save : Stores binary waveform data*2
Recording start methods	Interval time, manual, or at specified time, repeat
Recording stop methods	Manual, or at specified time (up to one year), timer

*1 The minimum interval time for saving screen copies is 5 min. If the setting is less than 5 min., screen copies will be saved every 5 min.

*2 With shortest interval of 1 minute.When set to less than 1 minute, waveforms are saved once every minute

External Interfaces

SD card	Settings data, measurement data, screen data, waveform data
LAN	100BASE-TX IEEE802.3 Compliance - HTTP server function, FTP server function
USB	USB Ver 2.0, Windows 10 (32/64bit)/Windows 8 (32/64bit)/ Windows 7 (32/64bit) / Vista (32bit) /XP - When connected to a computer, the SD Card and internal memory are recognized as removable storage devices.

General

Product guarantee	3 year
Display	3.5 inch TFT color LCD (320 × 240 pixel)
	Japanese, English, Chinese, Korean, German, Italian, French, Spanish, Turkish Backlight auto-off function (after 2 minutes) When AUTO OFF is active, the Power LED blinks
Operating environment	Indoors, Pollution degree 2, altitude up to 2000 m (6562-ft.)
Operating temperature and humidity (no condensation)	-10°C to 50°C (14°F to 122°F), 80% RH or less During battery operation: 0°C to 40°C (32°F to 104°F), 80% RH or less During battery charging: 10°C to 40°C (50°F to 104°F), 80% RH or less
Storage temperature and humidity (no condensation)	0°C to 60°C (32°F to 140°F), 80% RH or less However, the battery's storage temperature range is -10°C to 30°C (14°F to 86°F)
Maximum rated voltage between terminals	Voltage input section : 1.7 VAC, 2.4 Vpeak Current input section : 1.7 VAC, 2.4 Vpeak
Maximum rated voltage to earth	Voltage input section: 600V Measurement Category Ⅲ 300V Measurement Category Ⅳ Current input section: Depends on clamp sensor in use.
Dielectric strength	7.06 kVrms AC
Applicable standards	Safety: EN61010, EMC: EN61326
Power supply	(1) Z1008 AC Adapter : 100 V AC to 240 V AC Maximum rated power : 45 VA (including AC adapter) (2) Model 9459 Battery Pack : Ni-MH DC7.2 V 2700 mAh Continuous battery operation time Approx. 5 hr. Maximum rated power : 3 VA
Charge function	Charge time: Max. 6 hr. 10 min. (reference value at 23°C) Charges the battery regardless of whether the instrument is on or off
Backup battery life	Clock and settings (Lithium battery), Approx. 10 years @23°C (@73.4°F)
Dimensions	Approx. 180W(7.09") × 100H(3.94") × 48D (1.89") mm (without PW9002)
	Approx. 180W(7.09") × 100H(3.94") × 68D (2.68") mm (with PW9002)
Mass	Approx. 540g (19 oz) (without PW9002), Approx. 820g (28.9 oz) (with PW9002)
Accessories	SAFETY VOLTAGE SENSOR PW9020 (4) AC ADAPTER Z1008 (1) USB cable (1) Instruction manual (1) Measurement guide (1) Red, yellow, blue and white color clips (4 each) Spiral tubes (10)

POWER LOGGER VIEWER SF1001 Specifications

Functions

Trend graph display function	Display items Voltage, current, active power, reactive power, apparent power, power factor, frequency, integrated active power, integrated reactive power, demand volume, demand value, voltage dis-equilibrium factor
	Stacked bar graph display : Up to 16 types of data series
	Cursor measurements Measurement values can be displayed by the cursor
Summary display function	Displayed items are the same as for the trend Graph Display
	Daily, weekly and monthly report displays: Accumulates and displays daily, weekly and monthly reports over specified period.
	Load factor calculation display: Calculates and displays load factor and demand factor results with daily, weekly and monthly reports
	Time span aggregation: Aggregates data into up to four specified time spans
Waveform display	Displays waveform data at specified date and time
Copy function	Captures any display image to the clipboard
Print function	Preview and print content shown on the trend graph, report, harmonic graph and settings displays.
	Comment entry (Text comments can be entered in any printout)
	Header/Footer settings: Sets the header and footer for each printout
	Printing support Any color or monochrome printing supported by the operating system
Report printing	Print (static) contents over a specific time period
	Output contents: Standard or selected output items
	Available output items: Trend graph, summary, daily report, waveform
	Report creation method: Standard print
	Report output settings: Save/load report output settings

General Specifications

Supported models	PW3365-20 / PW3360-20 / PW3360-21 LR5000 series ; Data previously loaded by the LR5000 Utility (.hrp2 format) using a PC
Supported computer operating systems	Windows 10 (32/64bit) Windows 8 (32/64bit) Windows 7 SP1 or later (32/64bit)

Current CLAMP



CLAMP ON SENSOR
9694
Cord length
3 m (9.84ft)



CLAMP ON SENSOR
9660
Cord length
3 m (9.84ft)



CLAMP ON SENSOR
9661
Cord length
3 m (9.84ft)



CLAMP ON SENSOR
9669
Cord length
3 m (9.84ft)



CLAMP ON SENSOR
9695-02

Connect with the 9695-02/-03,
Output BNC terminal
Cord length: 3 m (9.84ft)



CONNECTION CORD
9219

CLAMP ON SENSOR
9695-03

Measurable conductor diameter	φ15 mm (0.59")	φ15 mm (0.59")	φ46 mm (0.81")	φ55 mm (2.17") 80 (3.15")×20 (0.79") mm	φ15 mm (0.59")	φ15 mm (0.59")
Primary current rating	5 A AC	100 A AC	500 A AC	1000 A AC	50 A AC	100 A AC
Accuracy Amplitude (45 to 66 Hz) / Phase (45 Hz to 5 kHz)	±0.3% rdg.±0.02% f.s. Within ±2°	±0.3% rdg.±0.02% f.s. Within ±1°	±0.3% rdg.±0.01% f.s. Within ±0.5°	±1.0% rdg.±0.01% f.s. Within ±1°	±0.3% rdg.±0.02% f.s. Within ±2°	±0.3% rdg.±0.02% f.s. Within ±1°
Frequency characteristic 40Hz to 5kHz	Within ±1.0%	Within ±1.0%	Within ±1.0%	Within ±2.0%	Within ±1.0%	Within ±1.0%
Effect of external magnetic field with a magnetic field of 400 A/ m AC	Equivalent to 0.1 A or less	Equivalent to 0.1 A or less	Equivalent to 0.1 A or less	Equivalent to 1 A or less	Equivalent to 0.1 A or less	Equivalent to 0.1 A or less
Effect of conductor position	Within ±0.5%	Within ±0.5%	Within ±0.5%	Within ±1.5%	Within ±0.5%	Within ±0.5%
Maximum rated voltage to earth	CAT Ⅲ 300 V rms	CAT Ⅲ 300 V rms	CAT Ⅲ 600 V rms	CAT Ⅲ 600 V rms	CAT Ⅲ 300 V rms	CAT Ⅲ 300 V rms
Maximum input 45-66 Hz	50 A continuous	130 A continuous	550 A continuous	1000 A continuous	60 A continuous	130 A continuous
Dimensions / Mass	46W × 135H × 21D mm / 230 g (1.81") × (5.31") × (0.83") / (8.1 oz)	46W × 135H × 21D mm / 230 g (1.81") × (5.31") × (0.83") / (8.1 oz)	77W × 151H × 42D mm / 380 g (3.03") × (5.94") × (1.65") / (13.4 oz)	99.5W×188H×42D mm/ 590 g (3.92")×(7.40")×(1.65") / (20.8 oz)	50.5W×58H×18.7D mm / 50 g (2.28")×(2.28")× (0.74") / (1.8 oz)	50.5W×58H×18.7D mm / 50 g (2.28")×(2.28")×(0.74") / (1.8 oz)



CT9667-01 CT9667-02 CT9667-03
AC FLEXIBLE CURRENT SENSOR

Cord length : Sensor - circuit: 2 m (6.56ft) , Circuit - connector: 1 m (3.28ft)

Measurable conductor diameter	CT9667-01 : φ100 mm, CT9667-02 : φ180 mm CT9667-03 : φ254 mm
Primary current rating	AC500 A/ AC5000 A (Switchable)
Accuracy 45-66Hz	±2.0% rdg ± 0.3% f.s. / Within ±1°
Frequency 10-20kHz	Within ± 3dB
Effect of external magnetic field	1.5% / f.s. or less
Effect of conductor position	Within ± 3%
Maximum rated voltage to earth	CAT Ⅲ 1000 V rms / CAT IV 600 V rms
Maximum input 45-66Hz	10000 A continuous
Dimensions / Mass	Circuit box: 35W×120.5H×34D CT9667-01, -02 : 280 g, CT9667-03 : 470 g
Power supply	LR06 alkaline battery × 2 or AC ADAPTER 9445-02/9445-03 (optional)



CLAMP ON LEAK SENSOR
9657-10
Leakage Current Measurement Only
Cord length : 3 m (9.84ft)



CLAMP ON LEAK SENSOR
9675
Leakage Current Measurement Only
Cord length : 3 m (9.84ft)

Measurable conductor diameter	φ40 mm	φ30 mm
Primary current rating	AC 10 A*	AC 10 A*
Accuracy	±1.0% rdg ±0.05% f.s. / Within ±3°	±1.0% rdg ±0.05% f.s. / Within ±5°
Frequency 40 - 5kHz	Within ± 5%	Within ± 5%
Effect of external magnetic field	7.5 mA max.	7.5 mA max.
Effect of conductor position	Within ±0.1%	Within ±0.1%
Measurable conductor	Insulated conductor	Insulated conductor
Maximum input 45-66Hz	30A continuous	10A continuous
Dimensions / Mass	74W× 145H × 42D / 380g	60W× 112.5H × 23.6D / 160g
Notes	Not used for power measurements *Maximum AC measurement range with PW3365-20 is 5 A	Not used for power measurements *Maximum AC measurement range with PW3365-20 is 5 A

Measurement Range Configurations

CLAMP ON SENSOR 9694 / 9695-02 *1

Voltage	Connection	Current				
		500.00 mA	1.0000 A	5.0000 A	10.000 A	50.000 A
400.0 V	1P2W	200.00 W	400.00 W	2.0000 kW	4.0000 kW	20.000 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400.00 W	800.00 W	4.0000 kW	8.0000 kW	40.000 kW
	3P4W	600.00 W	1.2000 kW	6.0000 kW	12.000 kW	60.000 kW

CLAMP ON SENSOR 9660 / 9695-03 / 9661*2

Voltage	Connection	Current				9661 only
		5.0000 A	10.000 A	50.000 A	100.00 A	500.00 A
400.0 V	1P2W	2.0000 kW	4.0000 kW	20.000 kW	40.000 kW	200.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	4.0000 kW	8.0000 kW	40.000 kW	80.000 kW	400.00 kW
	3P4W	6.0000 kW	12.000 kW	60.000 kW	120.00 kW	600.00 kW

CLAMP ON SENSOR 9669

Voltage	Connection	Current		
		100.00 A	200.00 A	1.0000 kA
400.0 V	1P2W	40.000 kW	80.000 kW	400.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	80.000 kW	160.00 kW	800.00 kW
	3P4W	120.00 kW	240.00 kW	1.2000 MW

AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (5 kA)

Voltage	Connection	Current		
		500.00 A	1.0000 kA	5.0000 kA
400.0 V	1P2W	200.00 kW	400.00 kW	2.0000 MW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400.00 kW	800.00 kW	4.0000 MW
	3P4W	600.00 kW	1.2000 MW	6.0000 MW

AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (500 A)

Voltage	Connection	Current		
		50.00 A	100.00 A	500.00 A
400.0 V	1P2W	20.000 kW	40.000 kW	200.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	40.000 kW	80.000 kW	400.00 kW
	3P4W	60.000 kW	120.00 kW	600.00 kW

Leak current: CLAMP ON LEAK SENSOR 9657-10, 9675

Range	50.000 mA/ 100.00 mA/ 500.00 mA/ 1.0000 A/ 5.0000 A

Combined Accuracy

PW3365-20 + PW9020 + clamp sensors

Range	9694	9695-02
50.000 A	-	±2.3% rdg. ±0.32% f.s.
10.000 A	-	±2.3% rdg. ±0.4% f.s.
5.0000 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.5% f.s.
1.0000 A	±2.3% rdg. ±0.4% f.s.	±2.3% rdg. ±1.3% f.s.
500.00 mA	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±2.3% f.s.

Range	9660, 9695-03	9661
500.00 A	-	±2.3% rdg. ±0.31% f.s.
100.00 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.35% f.s.
50.000 A	±2.3% rdg. ±0.34% f.s.	±2.3% rdg. ±0.4% f.s.
10.000 A	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±0.8% f.s.
5.0000 A	±2.3% rdg. ±0.7% f.s.	±2.3% rdg. ±1.3% f.s.

Range	9669
1.0000 kA	±3% rdg. ±0.31% f.s.
200.00 A	±3% rdg. ±0.35% f.s.
100.00 A	±3% rdg. ±0.4% f.s.

Range	CT9667-01, -02, -03 5.000kA range	CT9667-01, -02, -03 500A range
5.0000 kA	±4% rdg. ±0.6% f.s.	-
1.0000 kA	±4% rdg. ±1.8% f.s.	-
500.00 A	±4% rdg. ±3.3% f.s.	±4% rdg. ±0.6% f.s.
100.00 A	-	±4% rdg. ±1.8% f.s.
50.000 A	-	±4% rdg. ±3.3% f.s.

Conditions of guaranteed accuracy	After 30 minute warm-up, with 50/60 Hz sine wave input voltage to earth 400V or less
Temperature and humidity for guaranteed accuracy	23˚C ±5˚C (73 ± 9°F), 80%RH or less (applies to all specifications unless otherwise noted)
Display area of guaranteed accuracy	Effective measurement range
Real-time clock accuracy	Within ±0.3 sec/day (with power on, within specified operating temperature and humidity ranges)
Temperature characteristic	Within ±0.1% f.s./ ˚C (except 23±5°C)
Effect of external magnetic field	Within ±1.5% f.s. (in a magnetic field of 400 A/m rms AC, 50 Hz/60 Hz)
Effect of radiated, radio-frequency, electromagnetic field	Within ±5% f.s. for voltage and active power at 10 V/m
Apparent power	±1 dgt. for the calculation obtained from each measurement value
Reactive power	Fundamental waveform calculations ±2.0% rdg. ±3.0% f.s. + clamp-on sensor accuracy (w/power factor = 1)
	Rms calculations From each measurement applied to calculation ±1 dgt.
Energy	Active and reactive power measurement accuracies ±1 dgt.
Power factor	From each measurement applied to calculation ±1 dgt.
Frequency	±0.5% rdg. (with 90 to 520 V sine wave input)
Demand value	Active and reactive power measurement accuracies ±1 dgt.
Demand quantity	Active and reactive power measurement accuracies ±1 dgt.

*1 For the 9694 sensor, the range of guaranteed accuracy is from 500 mA to 5 A, and for the 9695-02, from 500 mA to 50 A.

*2 For the 9660 and 9695-03 sensors, the range of guaranteed accuracy is from 5 A to 100 A and for the 9661, from 5 A to 500 A.

Current Display and Effective Measurement Ranges

typical

	Range	Total display range	Effective measurement range		Total display range	Effective peak
		Minimum	Minimum	Maximum	Maximum	Range
Voltage	400 V Range	5.0 V	90.0 V	520.0 V	520.0 V	±750 V peak
Current	5 A Range	0.0200 A	0.2500 A	5.5000 A	6.5000 A	±20 A peak
	10 A Range	0.040 A	0.500 A	11.000 A	13.000 A	±40 A peak
	50 A Range	0.200 A	2.500 A	55.000 A	65.000 A	±200 A peak
	100 A Range	0.40 A	5.00 A	110.00 A	130.00 A	±400 A peak
	500 A Range	2.00 A	25.00 A	550.00 A	650.00 A	±1000 A peak



LAN
USB 2.0
SD
SD HC
CE
3 year Warranty

GERMAN DESIGN AWARD SPECIAL 2016
*For Voltage Sensor

2015 The Nikkan Kogyo Shimbun Distinctive Merit Award
* For PW3365

Accessories

• SAFETY VOLTAGE SENSOR PW9020	×4
• AC ADAPTER Z1008	×1
• USB cable (0.9 m, 2.95 ft length)	×1
• Instruction manual	×1
• Measurement guide	×1
• Color clips (red, green, yellow, white)	4 each
• Spiral tubes	×10



Model : CLAMP ON POWER LOGGER PW3365

Model No. (Order Code)	(Note)
PW3365-20	(English model, main unit only)

Clamp On Power Logger PW3365-20 by itself does not support current and power measurements. Current and power measurements require clamp on sensors, sold separately. Use only HIOKI SD cards guaranteed to work for saving measurement data (options, sold separately).

Options

CLAMP ON SENSOR (for load current measurement)


CLAMP ON SENSOR	9694	(AC 5 A)
CLAMP ON SENSOR	9660	(AC 100 A)
CLAMP ON SENSOR	9661	(AC 500 A)
CLAMP ON SENSOR	9669	(AC 1000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-01	(AC 500 A/ 5000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-02	(AC 500 A/ 5000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-03	(AC 500 A/ 5000 A)
CLAMP ON SENSOR (Not CE marked) *	9695-02	(AC 50 A)
CLAMP ON SENSOR (Not CE marked) *	9695-03	(AC 100 A)
CONNECTION CORD	9219	(for connection to 9695-02, 9695-03)

* When purchasing the 9695-02 and 9695-03, we recommend also purchasing the separately sold 9219 Connection Cord.

CLAMP ON LEAK SENSOR (for leakage current measurement)

CLAMP ON LEAK SENSOR	9657-10
CLAMP ON LEAK SENSOR	9675

CLAMP ON ADAPTER 9290-10

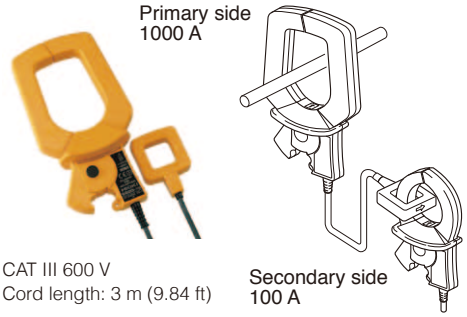


CAT III 600 V
Cord length: 3 m (9.84 ft)

Measurable conductor diameter

φ55 mm (2.17 in)
Bus bar : 80 mm (3.46in) 5 20 mm (0.79 in)
CT ratio : 10:1
MAX. 1500 A AC (continuous: 1000 A)

POWER LOGGER VIEWER SF1001

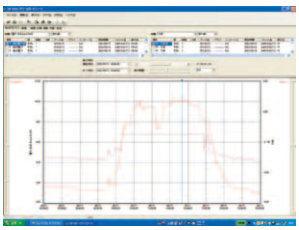

Supported computer operating systems

Trend graph display function
Summary display function
Waveform display, Print function
Report printing

BATTERY SET PW9002



Battery Case and Battery Pack Set

BATTERY PACK 9459
For purchase as replacement battery pack

SAFETY VOLTAGE SENSOR PW9020



PW3365-20 is bundled with 4 sensors
Additional single sensors also available
Cord length: 3 m (9.84 ft)

CARRYING CASE C1005/C1008



	C1005	C1008
Dimension : (Approx)	390W (15.4") 275H (10.8") 110D (4.3") mm	390W (15.4") 275H (10.8") 150D (5.9") mm

AC ADAPTER Z1008



Includes standard
For separate purchase

SD MEMORY CARD Z4003



8 GB capacity


SD MEMORY CARD 2GB Z4001



2 GB capacity

Stores up to one year's data when acquired at one minute intervals. Performance cannot be guaranteed on storage media other than Hioki-specified SD card options.

LAN CABLE 9642

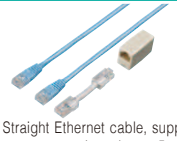

Straight Ethernet cable, supplied with straight to cross conversion adapter, 5 m (16.41 ft) length

Note: Company names and product names appearing in this catalog are trademarks or registered trademarks of various companies.

HIOKI
HIOKI E.E. CORPORATION
HEADQUARTERS
81 Koizumi,
Ueda, Nagano 386-1192 Japan
https://www.hioki.com/

Scan for all regional contact information

DISTRIBUTED BY

ASM®

ASM Automation Sensorik Messtechnik GmbH
Tel. +49 8123 986-0
info@asm-sensor.de
www.asm-sensor.de
Am Bleichbach 18 - 24
85452 Moosinning

HIOKI

ASM®


ENERGIE-LOGGER 3365-20(PW)

Aktuelle Daten -
siehe englisches Datenblatt

Leistungsmessgeräte



Erstmals gefahrloses Messen durch patentierte Spannungsmessung!

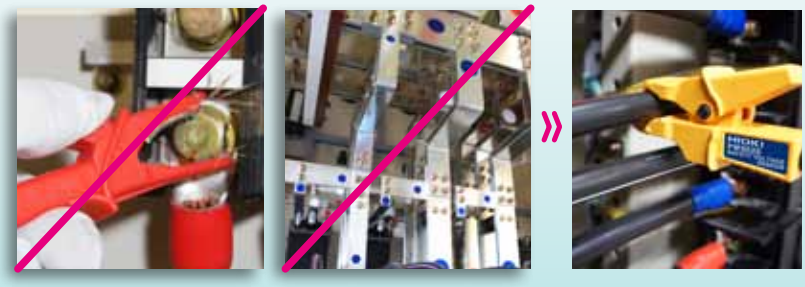

Innovatives Messgerät für gefahrlose Verbrauchsmessung elektrischer Energie

Keine Metallteile, die spannungsführende Teile berühren und Kürzschlüsse und gefährliche Lichtbogen verursachen können. Somit kann der **Energie-Logger 3365-20(PW)** sichere Messungen der Spannung, des Stroms und der Leistung direkt am Kabel an den gefährlichen Stellen, an denen eine vollkommen sichere Messung früher nicht möglich war, durchführen.

ISO 9001 JMI-0216
ISO14001 JQA-E-90091

CE

Energiemessung - sicherer gemacht

Dank seinem speziellen Spannungssenor führt der 3365-20(PW) Messungen ohne Kontakt zu Metallteilen durch.

Mit Messungen direkt an der Leiterummantelung und ohne die Metallelemente oder spannungsführende Teile berühren zu müssen, reduzieren Sie das Kurzschlussrisiko erheblich!





Horizontal oder vertikal anklemmbar





Für Messungen an dicken, wie auch dünnen Leitungen

Für Messungen an potentiell gefährlichen Messorten





Messort ohne spannungsführenden Teile

an der Kabel-isolierung messen






Messort mit abgedeckten Anschlüssen

Abdeckungen müssen für die Messung nicht entfernt werden




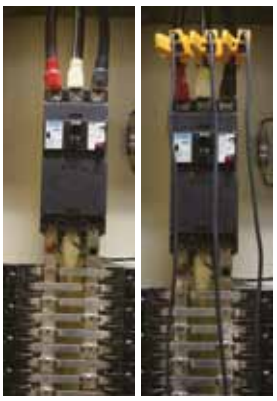


Messort mit hohem Unfallrisiko

an sicheren Punkten messen

Wie wird Spannung ohne Kontakt zu Metall gemessen?

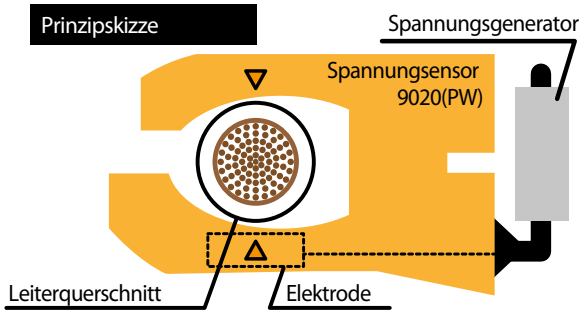

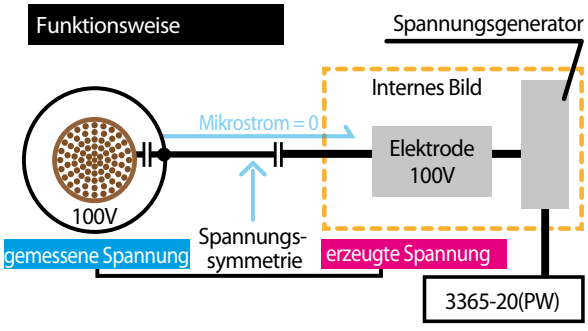

Im 9020(PW) befindet sich eine Elektrode (eine Metallplate). Sollte eine Potentialdifferenz zwischen dieser Elektrode und dem gemessenen System sein, fließt als Resultat ein winziger Strom. Dieser wird erfasst, dann wird eine Spannung erzeugt, um diesen Strom auf Null zu reduzieren. Diese Spannung kann wiederum genau und ohne jeglichen Einfluss des Leiter- Aussendurchmessers oder der Isolierung gemessen werden.



Vergrößerte Ansicht des Zangenkerns

Maximal Ø (Originalgröße): Ø30mm
Minimal Ø (Originalgröße): Ø6mm

Zulässige Leiterdurchmesser

SICHERHEITS-STROMZANGE 9020(PW)

Leitertyp	Isolierte Leitungen*1 PVC-Ummantelung oder Metallteile
Leiterdurchmesser	Aussendurchmesser Ø6mm bis Ø30mm
Messbereich	90 V bis 520 V
Genauigkeit	±1,5% rdg. ±0,2% f.s. (kombinierte Genauigkeit des 3365-20(PW))*2
Einfluss der Phase	Kombinierte Genauigkeit mit dem 3365-20(PW) innerhalb ±1,3% (beim Eingang von 50/60Hz vom Messbereich)
Max. Spannung gegen Erde	CATIV 300V / CATIII 600V
Kabellänge	3m
Gewicht	ca. 220g
Betriebstemperatur und -feuchte	0°C bis 50°C, bis 80% rel. Feuchte (nicht kondensierend)
Lagertemperatur und -feuchte	-10°C bis 60°C, 80% rel. Feuchte (nicht kondensierend)
Spannungsfestigkeit	7,06k Veff AC
Normenkonformität	Sicherheit: EN61010, EMV: EN61326

* **Mit einem Relais-Box am Kabel**

Schmutz, Rückstände oder Feuchtigkeit an den isolierten Leitungen können niedrigere Spannungs- und Leistungswerte verursachen. Vor der Messung die Leitung mit einem trockenen Lappen reinigen!

*1: Geschirmte Leitungen können nicht gemessen werden.

*2: Für Frequenzen von 45 Hz bis 66 Hz.
Feuchteeinfluss: die folgenden Genauigkeitswerte zu der kombinierten Genauigkeit des 3365-20(PW)(für Spannung,Leistung und Phase) hinzuaddieren. Genauigkeit innerhalb ±1% f.s., Phase innerhalb ±1°, Messung an isolierten Leitungen bei der rel. Feuchte von 70% bis 80%.
Einfluss der naheliegenden Leitungen: die folgenden Genauigkeitswerte (für Spannung und Leistung) zum 3365-20(PW), innerhalb ±1% f.s., wenn eine Leitung mit einer Phasendifferenz von 400 V im Kontakt mit dem Griff ist, hinzufügen.

Schnelleinstellung mit der Quick Set-Funktion

Grafische Führung für die Verdrahtungsprozedur.

Zuverlässige Messungen beginnen mit der richtigen Verdrahtung. Die QUICK SET-Funktion sorgt für den korrekten Anschluss sämtlicher Messleitungen und somit für den schnellen Messbeginn. Bei einer falschen Verdrahtung wird sofort eine FAIL-Meldung mit den problematischen Anschlussstellen angezeigt .



Schnelleinstellung (Beispiel: 3P4W)

SCHRITT1 Quick Set-Funktion starten / Verdrahtungssystem wählen

SCHRITT2 Messleitungen an den 3365-20(PW) anschließen





SCHRITT3 Den Spannungssensor anklemmen





SCHRITT4 Stromzangen anklemmen






SCHRITT5 Den Strommessbereich wählen

SCHRITT6 Den Verdrahtungsstatus prüfen



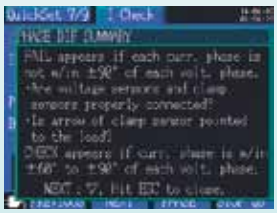

Bei einer FAIL-Meldung

Ist die Verdrahtung falsch und FAIL erscheint, bewegen Sie den Cursor auf die Anzeige und drücken [ENTER]. Informationen über Verdrahtungsstellen, die korrigiert werden müssen, werden angezeigt.

Messung


Beispiel eines Falschanschlusses

(Ausrichtung der Stromzange)

Leistung und Leistungsfaktor können nicht korrekt gemessen werden, wenn die Ausrichtung der Stromzange falsch ist!

korrekte Ausrichtung

der Pfeil muss Richtung Lastseite zeigen

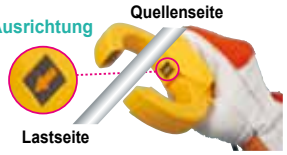

FAIL Die Phasenrichtung des I-Vektors befindet sich außerhalb der Bestimmungsfläche.



P: 6,2kW – angezeigter P-Wert (Leistung) ist zu niedrig

PASS Die Phasenrichtung des I-Vektors befindet sich innerhalb der Bestimmungsfläche.



P: 17,8kW


CURR PHASE rot bedeutet : FAIL VOLT PHASE grün bedeutet : PASS

Ergebnisse anzeigen

Am Messort

Messwerte graphisch darstellen und mit einem Blick analysieren

Die graphische Darstellung der gemessenen Werte ist besonders nützlich für Anwendungen im Energie-Management. Der Überblick über die aktuell gemessenen Werte, wie auch über die gespeicherten Messdaten erleichtert die Messdatenauswertung.

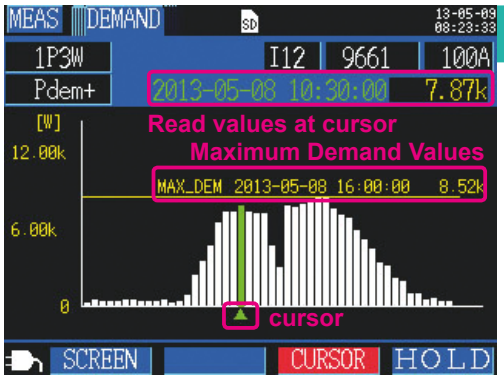

Bar graph of values measured over a period of 24 hours at a 30-minute interval

Verbrauchsanzeige

Trends der Verbrauchswerte anzeigen


Einfache Prüfung des maximalen Verbrauchswert und dessen Messzeit.


Besonders nützlich für Anwendungen im Energie-Management

Energie-Erzeugung in Photovoltaik-Anlagen überwachen



In der erstellten Balkenanzeige wird es deutlich erkennbar, ob Energie gerade gekauft oder verkauft wird, wenn Sie die Anzeige für den Wirkleistungsverbrauchswert vom Verbrauch auf die Erzeugung umschalten.

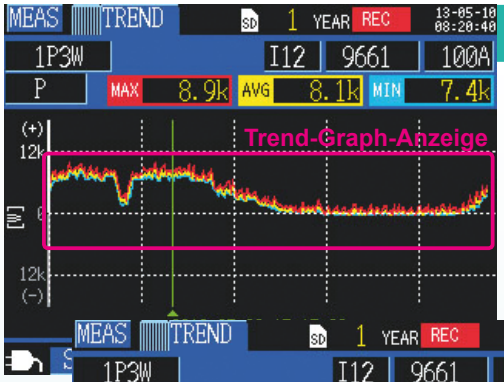

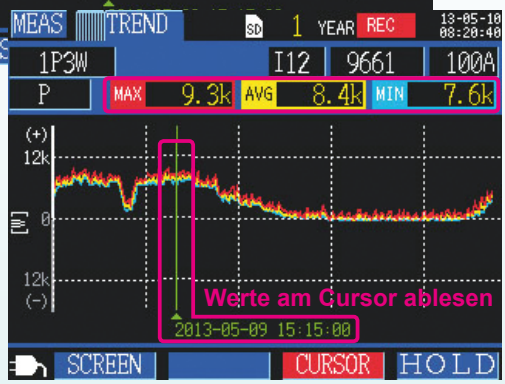

Graph der gemessenen Werte: Dauer 24 h mit 5-Min.-Intervall

Trend-Graph-Anzeige

* außer für Verbrauch


Erstellen einer graphischen Zeitreihen-Anzeige anhand der Messdaten eines gewählten Parameters

Überwachen Sie Stromversorgungsschwankungen, um den Zusammenhang zwischen dem Betriebsstatus der Messanlagen und dem Energieverbrauch festzustellen.


Anzeige der Maximal- , Minimal- und Durchschnittswerte an der Cursorposition

Diese Parameter sind sofort an der Zeitachse erkennbar


Beispiel: Leistungs-Trend-Graph



Alle Schwankungen erfassen und aufzeichnen

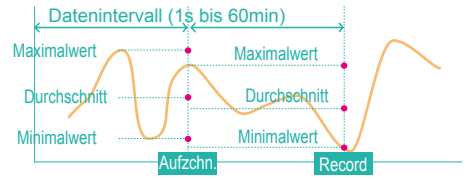

Stellen Sie den Energie-Logger auf das Speichern sämtlicher Parameter und die Aufzeichnung von Maximal-, Minimal- und Durchschnittswerten mit dem spezifizierten Aufzeichnungsintervall ein.

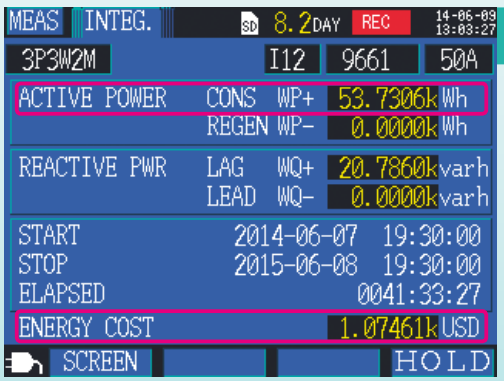

Energiekosten anzeigen

Verbrauch integrierter Leistung in Energiekosten umwandeln

Tatsächliche Ausgaben für Elektrizitätskosten werden berechnet.

Energiekosten anzeigen

Wirkleistungsverbrauch 1 kWh × Preis

Energiekosten berechnen

[Beispiel siehe links]

Der Energiepreis für 1kWh wurde auf $20 festgelegt
Wirkleistungsverbrauch 53,7306kWh × Preis 20 USD

Energiekosten 1074,61 USD

Speichern und Analysieren der

Ergebnisse im PC

Problemloser Datendownload und Datenverarbeitung am PC

Die im Internspeicher des Energie-Loggers oder auf der SD-Karte gespeicherten Daten sind über eine LAN- oder USB-Anbindung zugänglich und können mit Hilfe der kostenlosen 3365-20(PW) Download-Software zum PC heruntergeladen werden. Für detailierte Analysen wird die Software 1001(SF) von HIOKI empfohlen.

Speichermedien

SD-Karte 2GB

Empfohlen für das Langzeit-Speichern über 1 Jahr für Daten, die mit einem 1-Min.-Intervall aufgezeichnet wurden.



SD-Schlitz mit Abdeckung

Daten-Download

SD-Karte 2GB

LAN

USB



Verwenden Sie für den Download über die LAN-/USB-Schnittstelle des Messgeräts die kostenlose Software auf der Hioki-Website.

Aufzeichnungszeit

Messintervall	Speicherzeit	Messintervall	Speicherzeit
1 s	15,6 Tage	30 s	1 Jahr
2 s	31,2 Tage	1 min.	1 Jahr
5 s	77,9 Tage	2 min.	1 Jahr
10 s	155 Tage	5 min.	1 Jahr
15 s	233 Tage	über 10 min.	1 Jahr

[Speicherbedingungen für die obigen Werte]
Messsystem : 3P4W
Speichermedium : 4001(Z) 2-GB SD-Karte
Speicherparameter : Alle Daten: Durchschnitts-, Max.- und Min.-Werte
Bildschirmkopie speichern : AUS Signalverlauf speichern : AUS

Die maximale Dateigröße für Messdaten beträgt ca. 200 MB.
Für Daten über 200 MB wird eine neue Datei erstellt und weiterhin gespeichert.

Freeware (kostenloser Download von der Hioki-Website)

Nützliche Funktionen

- **Gespeicherte Messdaten direkt vom Messgerät laden** (über die USB-/LAN-Verbindung)
- **Gespeicherte Messdaten in Excel anzeigen**
- **Einstellungen vom PC zum 3365-20(PW) übertragen**
- **Daten ausdrucken**


Excel-Graphs werden automatisch erstellt



Power Logger Viewer 1001(SF) [optional, bestellbar für 3365(PW), 3360(PW), 3198(PW)]

Gespeicherte Daten anzeigen, tabellarisch anordnen, analysieren und ausdrucken

- **Trend-Graph**
- **Gesamtanzeige**
- **Signalverlauf**
- **Kopieren**
- **Ausdruck**
- **Berichten-Ausdruck**

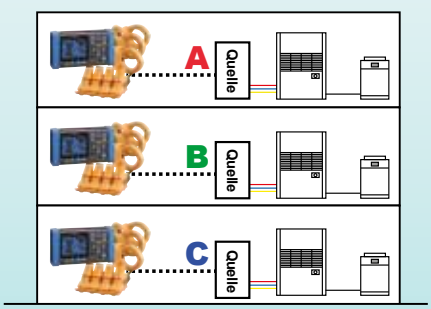

Stapel-Graphikanzeige − Beispiel

Die übereinander gelegten Anzeigen ermöglichen den sofortigen gleichzeitigen Vergleich des Energieverbrauchs von mehreren Messorten.



Nützliche Funktionen
für Messungen

Vielfältige Anwendung des 3365-20(PW)


Der Hioki 3365-20(PW) ist nicht nur ein Energie-Logger. Mit seinen vielen zusätzlichen Funktionen eignet sich das Messgerät bestens für eine breite Palette der Anwendungen im Prüffeld.

Ableitstrom-Messung

Optionale Ableitstromzange wird benötigt

Leistung + Ableitstrom von 1Kanal messen

Beispiel : 3P3W2M + Ableitstrom von 1Kanal

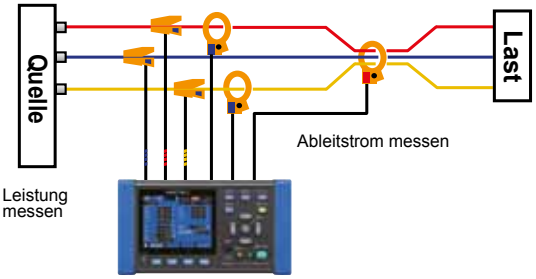

Da die Messdaten alle 200ms abgetastet und berechnet werden, kann ein periodischer Ableitstrom leicht aufgespürt werden. Durchschnitts-, Maximal- und/oder Minimalwert des gemessenen Intervall werden ebenfalls ersichtlich.


Ableitstrom-Ergebnisse



Mit der Erfassung der Effektivwerte der Grundschwingung kann der Ableitstrom der 50/60Hz-Komponenten gemessen werden.

RMS (A)	Effektivwert mit Oberschwingungskomponenten
FND (A)	Effektivwert der Grundschwingung (RMS)
PEAK (A)	Spitzenwert (Signalspitze)


Den Ableitstrom an 3 Kanälen messen

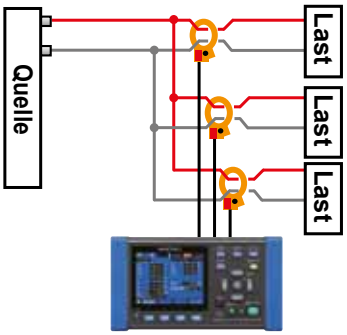

Fernbediente Steuerung und Anzeige

Mit dem LAN-Kabel wird der 3365-20(PW) an einen PC angeschlossen. Somit ist die Anzeige, Überwachung und Steuerung der Messungen in Echtzeit über einen Browser möglich.


Messdaten, die im Internspeicher des Energie-Loggers oder auf der installierten SD-Karte gespeichert wurden, sind über die LAN- oder USB-Schnittstelle zugänglich und können mit der kostenlosen 3365-20(PW) Setup- und Download-Software heruntergeladen werden.

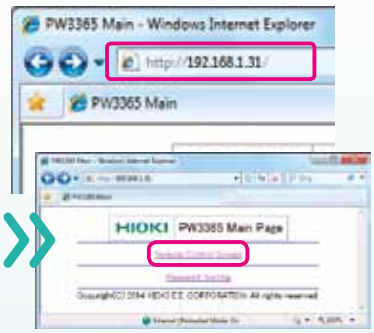

Die IP-Adresse im Browser eingeben.




Die Anzeige des Energie-Loggers aufrufen und mit den virtuellen Tasten, wie beim echten Gerät, bedienen.

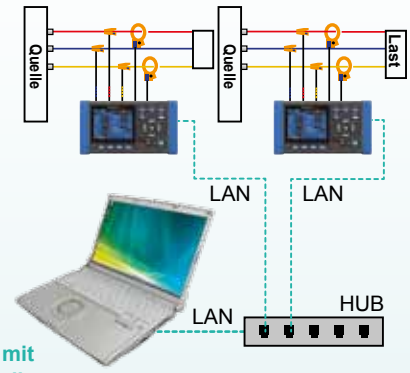

Gleichzeitige Messung

Gleichzeitige Messung von 3 1-Phasen-2-Leiter-Schaltkreise im gleichen System.

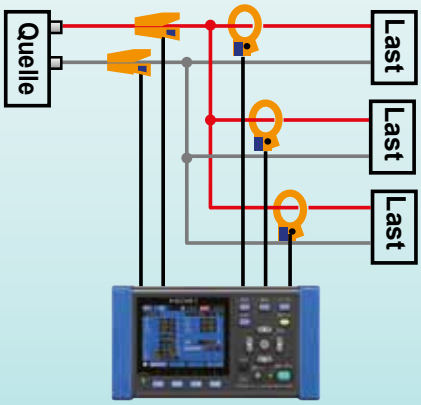

Weitere nützliche Merkmale



Kompakt und leicht

Kleine Abmessungen für den Einsatz an beengten Messstellen

Tastensperre

zur Vermeidung unbeabsichtigter Aktionen



Batteriebetrieb mit Akkusatz

Ca. 5 Stunden Dauerbetrieb, dient als Zweit-Stromversorgung

Anzeige halten

für einfacheres Ablesen der Messwerte



Wiederherstellung des Betriebs nach einem Ausfall

Nach einem Stromversorgungsausfall wird der Betrieb des Energie-Loggers automatisch wiederaufgenommen

Technische Daten des 3365-20(PW)

Schmutzrückstände und Feuchtigkeit an isolierten Kabeln und dem Spannungssensor sind zu vermeiden!
Produktgarantie 1 Jahr

Messung

Anzahl der Eingangskanäle		Spannung: 3 Kanäle / Strom: 3 Kanäle			
Messsysteme (50/60Hz)		1-Phasen-2-Leiter-Systeme (1P2W, 1P2W x 2 Kreise, 1P2W x 3 Kreise) 1-Phasen-3-Leiter-Systeme (1P3W, 1P3W+I, 1P3W1U, 1P3W1U+I) 3-Phasen-3-Leiter-Systeme (3P3W2M, 3P3W2M+I, 3P3W3M/nur Y-Verdrahtung) 3-Phasen-4-Leiter-Systeme (3P4W), nur Strom: 1 bis 3 Kanäle			
Gleichzeitige Leistungs-/Strom-Messung		1P3W+I : 1 Leistungskreis und 1 Strom-Kanal 3P3W2M+I : 1 Leistungskreis und 1 Strom-Kanal			
Messparameter	Spannung	Effektivwert RMS, Grundschwingungswert, Signalspitzenwert (Absolutwert), Phasenwinkel der Grundschwingung, Frequenz (U1)			
	Strom	Effektivwert RMS, Grundschwingungswert, Signalspitzenwert (Absolutwert), Phasenwinkel der Grundschwingung			
	Leistung	Wirkleistung, Blindleistung, Scheinleistung, Leistungsfaktor, (mit "voreilend/nacheilend"-Anzeige) oder Verschiebungsfaktor (mit "voreilend/nacheilend"-Anzeige), Wirkenergie (Verbrauch, Erzeugung), Blindenergie(voreilend/nacheilend) Energie-Kosten (Preis pro kWh × Leistungsverbrauch)			
	Verbrauch	Verbrauchswert der Wirkleistung (Verbrauch, Erzeugung), Verbrauchswert der Blindleistung (voreilend/nacheilend [lag, lead]), Maximalverbrauchswertes der Wirkleistung (Verbrauch, Erzeugung), Maximalverbrauchswertes der Blindleistung (voreilend/nacheilend [lag, lead]), Leistungsfaktor-Verbrauchswert			
Spannungs-Messbereich		400 V AC			
		Gesamtanzeige: 5V bis 520 V (Werte unter 5 V werden als 0 V angezeigt)			
		Effektiver Messbereich: 90 V bis 520 V, Spitze: ±750V [OVER]-Warnung - Überlaufanzeige			
Strom-Messbereich	Last-strom	STROMZANGE 9660	: 5/10/50/100 A		
		STROMZANGE 9661	: 5/10/50/100/500 A		
		STROMZANGE 9669	: 100/200/1k A		
		STROMZANGE 9694	: 500m/1/5/10/50 A		
		STROMZANGE 9695-02	: 500m/1/5/10/50 A		
		STROMZANGE 9695-03	: 5/10/50/100 A		
		FLEXIBLER STROMSENSOR CT9667	: 50/100/500 A (500A-Messbereich)		
		FLEXIBLER STROMSENSOR CT9667	: 500/1k/5k A (5000A-Messbereich)		
	Ableit-strom	ABLEIT-STROMZANGE 9675	: 50m/100m/500m/1/5 A		
		ABLEIT-STROMZANGE 9657-10	: 50m/100m/500m/1/5 A		
		Gesamtanzeige: innerhalb 0.4 bis 130% vom Messbereich (Nullunterdrückung für Werte unter 0,4%),			
		Effektiver Messbereich: innerhalb 5 bis 110% vom Messbereich; [OVER]-Warnung - Überlaufanzeige			
Leistungs-Messbereich		200,00 W bis 6,0000 MW Abhängig von Spannungs-/Strom-Kombination und dem Typ des Messsystems (siehe Konfigurationstabellen der Messbereiche)			
		Gesamtanzeige: innerhalb 0 bis 130% vom Messbereich (Anzeige “0W” bedeutet Null eff Spannung und/oder Strom)			
		Effektiver Messbereich: innerhalb 5 bis 130% vom Messbereich			
Messgenauigkeit (50/60Hz)		Spannung : ±1.5% rdg. ±0.2% f.s. (kombinierte Genauigkeit von PW3365-20 + PW9020) Strom : ±0.3% rdg. ±0.1% f.s. + Stromzangen-Genauigkeit Wirkleistung : ±2.0% rdg. ±0.3% f.s. + Stromzangen-Genauigkeit (Leistungsfaktor = 1)			
Berechnungsfunktion		Effektivwert-Berechnung/ Grundschwingung-Berechnung			
Einstellung des VT-Verhältnisses		beliebig	0,01 bis 9999,99	Auswahl	1/60/100/200/300/600/700/1000/2000/2500/5000
Einstellung des CT-Verhältnisses		beliebig	0,01 bis 9999,99	Auswahl	1/40/60/80/120/160/200/240/300/400/600/800/1200
Eingänge		Spannung: isolierte Eingänge (mit dem Spannungssenor 9020(PW)) Strom: isolierter Eingang mit Stromzange			
Aktualisierung der Anzeige		ca. 0,5 s (außer beim Zugriff auf die SD-Karte oder den Internspeicher, oder während der LAN-/USB-Kommunikation)			
Messmethode		Digitale Abtastung und Berechnung der Nulldurchgangs-Synchronisation Abtastung: 10,24 kHz (2048 Punkte) Berechnung 50 Hz: Kontinuierlich, lückenlose Messung mit 10 Zyklen 60 Hz: Kontinuierlich, lückenlose Messung mit 12 Zyklen			
A/D-Wandler-Auflösung		16 Bit			

*1 Werte für die Genauigkeit und kombinierte Genauigkeit der jeweiligen Stromzange siehe Seiten 10 und 11.

rdg. = vom Anzeigebereich f.s. = vom Messbereich

Anzeige

Liste	Spannung, Strom, Frequenz, Wirk-/Schein-/Blindleistung Leistungsfaktor, intergierte Leistung, abgelaufene Zeit
U/I	Effektivwert (RMS), Grundschwingungswert, Signalspitzenwert, Phasenwinkel
Leistung	Gesamtwert und pro-Kanal-Wert der Wirkleistung, Scheinleistung und Blindleistung, Leistungsfaktor
Integ	Wirkenergie (Verbrauch, Erzeugung), Blindenergie (voreilend/ nacheilend), Aufzeichnungsstartzeit, Aufzeichnungsstoppzeit, abgelaufene Zeit, Energie-Kosten
Verbrauch	Verbrauchswert der Wirkleistung, Verbrauchswert der Blindleistung, Verbrauchswert des Leistungsfaktors
Signalverlauf	Spannungs- und Stromsignalverlauf
Zoom	Vergrößerte Anzeige für 4 ausgewählte Parameter
Trend	Für einen gewählten Parameter wird der Max.-, Min.- und Durchschnitts-Wert angezeigt

Aufzeichnung

Speicherziel	SD-Karte, Internspeicher (Kapazität: ca. 320 KB)
Speicherintervall-zeit	1/2/5/10/15/30 s, 1/2/5/10/15/20/30/60 min. Die maximale Speicherzeit wird in der Einstellanzeige des 3365-20 ersichtlich
Speicher-parameter	Messdaten speichern : nur Durchschnittswert/ alle (Durchschnittswert, Min.-, Max.-Wert) Bildschirmkopie speichern : aktuelle Anzeige wird als BMP-Datei mit festem Intervall*1 gespeichert, Signalverlauf speichern : als Binärdaten*2
Aufzeichnungsstart	Intervallzeit, manuell, oder zur spezifizierten Zeit
Aufzeichnungsstopp	Manuell, oder zur spezifizierten Zeit (bis zu 1 Jahr)

*1 Das Mindestintervall für das Speichern von Bildschirmkopien beträgt 5 min. Bei Intervallen unter 5 min. werden die Bildschirmkopien alle 5 min. gespeichert.

*2 kürzestes Intervall: 1 min. Bei Intervallen unter 1 min. werden Signale 1 mal pro Minute gespeichert.

Externe Schnittstellen

SD-Karte	Einstelldaten, Messdaten, Bildschirm- und Signaldaten
LAN	10BASE-T/100BASE-TX IEEE802.3 kompatibel - HTTP-Server-Funktion
USB	USB Ver 2.0, Windows 8 (32/64bit)/Windows 7 (32/64bit) / Vista (32bit) /XP - Angeschlossen am PC, werden die SD-Karte und der Intern-speicher als Wechseldatenträger erkannt.
LAN/USB	Download der Einstellungen und Messdaten über die kostenlose Software.

Allgemeine Daten

Produktgarantie	1 Jahr
Anzeige	3,5" TFT-Farb-LCD (320 × 240 Punkte)
	Englisch **Automatische Abschaltung** der Hintergrundbeleuchtung (nach 2 min.). Wenn diese Funktion aktiviert ist, blinkt die Einschalt-LED
Betriebsumgebung	In Innenräumen, Verschmutzungsgrad 2, bis 2000 m Meereshöhe
Betriebstemperatur und -feuchte (nicht kondensierend)	-10°C bis 50°C, bis 80% rel. Feuchte Im Batteriebetrieb: 0°C bis 40°C, bis 80% rel. Feuchte Während der Batterieaufladung: 10°C bis 40°C, bis 80% rel. Feuchte
Lagertemperatur und -feuchte (nicht kondensierend)	0°C bis 60°C, bis 80% rel. Feuchte Lagertemperaturbereich für Batterie: -10°C bis 30°C, bis 80% rel. Feuchte
Max. Spannung zwischen den Eingängen	Spannungseingänge : 1,7 VAC, 2,4 V_{Spitze} Stromeingänge : 1,7 VAC, 2,4 V_{Spitze}
Max. Spannung gegen Erde	Spannungseingänge: 600V Messkategorie III 300V Messkategorie IV Stromeingänge: abhängig von der verwendeten Stromzange.
Spannungs-festigkeit	7,06 kVeff AC
Normenkonformität	Sicherheit: EN61010, EMC: EN61326, EN61000-3-2, EN61000-3-3
Strom-versorgung	• 1008(Z) AC-Netzteil (12 V, 1,25 A), Netzspannung 100 VAC bis 240 VAC, Max. Leistungsaufnahme : 45VA • 9459 Akkusatz (Ni-MH DC 7,2 V 2700 mAh), Dauerbetriebszeit ca. 5 h Max. Leistungsaufnahme : 3VA
Aufladung	Batterie/Akkusatz-Aufladung im ein- und ausgeschaltetem Zustand Ladezeit: max. 6 h 10 min. (Referenzwert bei 23°C)
Backup-Batterie	für Uhr und Einstellungen (Lithium-Batterie), ca. 10 Jahre bei 23°C
Abmessungen	ca. 180B × 100H × 48T mm (ohne 9002(PW))
	ca. 180B × 100H × 68T mm (mit 9002(PW))
Gewicht	ca. 540g (ohne 9002(PW)), ca. 820g (mit 9002(PW))
Zubehör	SICHERHEITS-SPANNUNGSSENSOR 9020(PW) (1 Satz) AC-Netzteil 1008(Z) (1), USB-Kabel (1), Bedienungsanleitung (1), Messanleitung (1), Spiralskabel (1 Satz): rot, gelb, blau/je 4, für die Farb-markierung der Stromzangen, Spiralkabel fürs Binden der Stromzangenkabel (10)

POWER LOGGER VIEWER 1001(SF) - SOFTWARE

Funktionen

Trend-Graph-Anzeige	Anzeigeparameter: Spannung, Strom, Wirkleistung, Blindleistung, Scheinleistung, Leistungsfaktor, Frequenz, integrierte Wirkleistung, integrierte Blindleistung, Verbrauchsmenge, Verbrauchswert, Spannungs-Unsymmetriefaktor
	Stapel-Graphanzeige: bis zu 16 Typen von Datensätzen können in übereinander gelegten Anzeigen dargestellt werden
	Cursormessung: Messwerte können mit dem Cursor angezigt werden
Gesamtanzeige	Anzeigeparameter wie bei der Trend-Graph-Anzeige
	Täglicher, wöchentlicher und monatlicher Bericht: Anzeige über eine spezifizierte Zeit.
	Lastfaktor-Berechnung: Berechnung und Anzeige des Lastfaktors und Verbrauchsfaktors in täglichen, wöchentlichen und monatlichen Berichten
	Zeitspannen-Anzeige: Zusammenfassung und Anzeige der Daten für 4 spezifizierte Zeitperioden
Signalverlaufs-anzeige	Signalverlaufsdaten werden für spezifiziertes Datum und spezifizierte Uhrzeit angezeigt
Kopieren	beliebige Bildschirmkopien werden in der Zwischenablage abgelegt
Drucken	Vorschau und Ausdruck des Trend-Graphen-Inhalts, des Berichts, des Oberschwingungsgraphen und der Einstellungen.
	Kommentar-Eingabe (Texte für jeden Ausdruck möglich)
	Header/Footer-Einstellung: Header/Footer für jeden Ausdruck
	für Farb- und s/w-Ausdrucke, die vom System unterstützt werden
Berichte ausdrucken	Druckinhalte über eine spezifizierte Zeit
	Ausgabe: Standard oder gewählte Inhalte
	Druckbare Parameter: Trend-Graph, Zusammenfassung, Tagesbericht, Oberschwingunen
	Ausdrucksmethode: Standard-Ausdruck
	Ausgabe-Einstellungen: Bericht speichern/laden

Allgemeine Daten

Unterstützte Geräte	3365-20(PW) / 3360-20(PW) / 3360-21(PW)
OS	Windows 8 (32/64 Bit) Windows 7 SP1 oder höher (32/64 Bit) Windows Vista SP2 oder höher (32 Bit) Windows XP SP3 oder höher (32 Bit)

Stromzangen

CE



STROMZANGE 9694
Kabellänge 3 m (9.84ft)



STROMZANGE 9660
Kabellänge 3 m (9.84ft)



STROMZANGE 9661
Kabellänge 3 m (9.84ft)



STROMZANGE 9669
Kabellänge 3 m (9.84ft)



STROMZANGE 9695-02
Verbindung mit 9695-02/-03, BNC-Ausgang
Kabellänge: 3 m (9.84ft)


ANSCHLUSSKABEL 9219



STROMZANGE 9695-03

	9694	9660	9661	9669	9695-02	9695-03
Maximaler Leiterdurchmesser	Ø15mm	Ø15mm	Ø46mm	Ø55mm 80 ×20 mm	Ø15mm	Ø15mm
Primärstrom	5A AC	100A AC	500A AC	1000A AC	50A AC	100A AC
Genauigkeit Amplitude (45 bis 66 Hz) / Phase (45 Hz bis 5 kHz)	±0,3% rdg.±0,02% f.s. Innerhalb ±2°	±0,3% rdg.±0,02% f.s. Innerhalb ±1°	±0,3% rdg.±0,01% f.s. Innerhalb ±0.5°	±1,0% rdg.±0,01% f.s. Innerhalb ±1°	±0,3% rdg.±0,02% f.s. Innerhalb ±2°	±0,3% rdg.±0,02% f.s. Innerhalb ±1°
Frequenzcharakteristik 40Hz bis 5kHz	Innerhalb ±1,0%	Innerhalb ±1,0%	Innerhalb ±1,0%	Innerhalb ±2,0%	Innerhalb ±1,0%	Innerhalb ±1,0%
Einfluss externer magnetischer Felder im magn. Feld von 400 A/ m AC	Äquivalent bis zu 0,1 A	Äquivalent bis zu 0,1 A	Äquivalent bis zu 0,1 A	Äquivalent bis zu 0,1 A	Äquivalent bis zu 0,1 A	Äquivalent bis zu 0,1 A
Einfluss der Leiterposition	Innerhalb ±0,5%	Innerhalb ±0,5%	Innerhalb ±0,5%	Innerhalb ±1,5%	Innerhalb ±0,5%	Innerhalb ±0,5%
Maximale Spannung gegen Erde	CAT Ⅲ 300V eff	CAT Ⅲ 300Veff	CAT Ⅲ 600Veff	CAT Ⅲ 600Veff	CAT Ⅲ 300Veff	CAT Ⅲ 300Veff
Maximaler Eingang 45-66Hz	50A kontinuierlich	130A kontinuierlich	550A kontinuierlich	1000A kontinuierlich	60A kontinuierlich	130A kontinuierlich
Abmessungen / Gewicht	46B × 135H × 21T mm / 230g	46B × 135H × 21T mm / 230g	77B × 151H × 42T mm / 380g	99,5B×188H×42T mm/ 590g	50,5B×58H×18,7Tmm / 50g	50,5B×58H×18,7Tmm / 50g



FLEXIBLER STROMSENSOR 9667(CT)
Kabellänge
Sensor - Kreis: 2 m
Kreis - Stecker: 1 m



ABLEITSTROMZANGE 9657-10
nur für Ableitstrom-Messungen
Kabellänge : 3 m



ABLEITSTROMZANGE 9675
nur für Ableitstrom-Messungen
Kabellänge : 3 m

	9667(CT)	9657-10	9675
Max. Leiterdurchmesser	Ø254mm	Ø40mm	Ø30mm
Primärstrom	AC500A/ AC5000A	AC10A*	AC10A*
Genauigkeit 45-66Hz	±2,0% rdg ± 0,3% f.s. / Innerhalb ±1°	±1,0% rdg ±0,05% f.s. / Innerhalb ±3°	±1,0% rdg ±0,05% f.s. / Innerhalb ±5°
Frequenz 10-20kHz	Innerhalb ± 3dB	Innerhalb ± 5%	Innerhalb ± 5%
Einfluss ext. magn. Felder	bis 1,5% v. Messbereich	7,5mA max.	7,5mA max.
Einfluss der Leiterposition	Innerhalb ± 3%	Innerhalb ±0,1%	Innerhalb ±0,1%
Maximale Spannung gegen Erde	CAT Ⅲ 1000Veff / CAT Ⅳ 600Veff	CAT Ⅲ 300Veff	CAT Ⅲ 300Veff
Max. Eingang 45-66Hz	10000A kontinuierlich	30A kontinuierlich	10A kontinuierlich
Abmessungen / Gewicht	Sensor-Box: 35B×120,5H×34T / 470g	74B× 145H × 42T / 380g	60B× 112,5H × 23,6T / 160g
Stromversorgung	LR06 alkalische Batterien × 2 oder AC-NETZTEIL 9445-02 (optional)		
Bemerkungen		nicht für Leistungsmessung *Der maximale AC-Messbereich mit dem 3365-20(PW) beträgt 5A rdg = vom Anzeigewert f.s. = vom Messbereich	nicht für Leistungsmessung *Der maximale AC-Messbereich mit dem 3365-20(PW) beträgt 5A rdg = vom Anzeigewert f.s. = vom Messbereich

Konfigurationsbereiche

STROMZANGE 9694 / 9695-02 *1

Span-nung	System	Strom				
		500,00mA	1,0000A	5,0000A	10,000A	50,000A
400.0V	1P2W	200,00W	400,00W	2,0000kW	4,0000kW	20,000kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400,00W	800,00W	4,0000kW	8,0000kW	40,000kW
	3P4W	600,00W	1,2000kW	6,0000kW	12,000kW	60,000kW

STROMZANGE 9660 / 9695-03 / 9661*2

Span-nung	System	Strom				9661only
		5,0000A	10,000A	50,000A	100,00A	500,00A
400,0V	1P2W	2,0000kW	4,0000kW	20,000kW	40,000kW	200,00kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	4,0000kW	8,0000kW	40,000kW	80,000kW	400,00kW
	3P4W	6,0000kW	12,000kW	60,000kW	120,00kW	600,00kW

STROMZANGE 9669

Span-nung	System	Strom		
		100,00A	200,00A	1,0000kA
400,0V	1P2W	40,000kW	80,000kW	400,00kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	80,000kW	160,00kW	800,00kW
	3P4W	120,00kW	240,00kW	1,2000MW

FLEXIBLER STROMSENSOR CT9667 (CT9667-5kA)

Span-nung	System	Strom		
		500,00A	1,0000kA	5,0000kA
400,0V	1P2W	200,00kW	400,00kW	2,0000MW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400,00kW	800,00kW	4,0000MW
	3P4W	600,00kW	1,2000MW	6,0000MW

FLEXIBLER STROMSENSOR 9667(CT) (9667CT-500A)

Span-nung	System	Strom		
		50,00A	100,00A	500,00A
400,0V	1P2W	20,000kW	40,000kW	200,00kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	40,000kW	80,000kW	400,00kW
	3P4W	60,000kW	120,00kW	600,00kW

Ableitstrom: ABLEITSTROMZANGEN 9657-10, 9675

Messbereich	50,000mA / 100,00mA / 500,00mA / 1,0000A / 5,0000A

rdg. = vom Anzeigebereich f.s. = vom Messbereich

Kombinierte Genauigkeit

3365-20(PW) + 9020(PW) + Stromzangen

Messbereich	9694	9695-02
50,000A	-	±2,3% rdg. ±0,32% f.s.
10,000A	-	±2,3% rdg. ±0,4% f.s.
5,0000A	±2,3% rdg. ±0,32% f.s.	±2,3% rdg. ±0,5% f.s.
1,0000A	±2,3% rdg. ±0,4% f.s.	±2,3% rdg. ±1,3% f.s.
500,00mA	±2,3% rdg. ±0,5% f.s.	±2,3% rdg. ±2,3% f.s.

Messbereich	9660, 9695-03	9661
500,00A	-	±2,3% rdg. ±0,31% f.s.
100,00A	±2,3% rdg. ±0,32% f.s.	±2,3% rdg. ±0,35% f.s.
50,000A	±2,3% rdg. ±0,34% f.s.	±2,3% rdg. ±0,4% f.s.
10,000A	±2,3% rdg. ±0,5% f.s.	±2,3% rdg. ±0,8% f.s.
5,0000A	±2,3% rdg. ±0,7% f.s.	±2,3% rdg. ±1,3% f.s.

Messbereich	9669
1,0000kA	±3% rdg, ±0,31% f.s.
200,00A	±3% rdg, ±0,35% f.s.
100,00A	±3% rdg, ±0,4% f.s.

Messbereich	9667(CT) 5,000kA Messbereich	9667(CT) 500A Messbereich
5,0000kA	±4% rdg. ±0,6% f.s.	-
1,0000kA	±4% rdg. ±1,8% f.s.	-
500,00A	±4% rdg. ±3,3% f.s.	±4% rdg, ±0,6% f.s.
100,00A	-	±4% rdg, ±1,8% f.s.
50,000A	-	±4% rdg, ±3,3% f.s.

Voraussetzung für die angegebene Genauigkeit	30 Minuten Aufwärmphase, Sinus-Eingang 50/60 Hz, Spannung gegen Erde bis 400V
Temperatur- und Feuchte	23˚C ±5˚C, bis 80% rel. Feuchte; (bezieht sich auf alle Daten, wenn nicht anders spezifiziert)
Anzeigebereich	Effektiver Messbereich
Genauigkeit garantiert für	1 Jahr
Genauigkeit der Echtzeit-Uhr	Innerhalb ±0,3 s/Tag (eingeschaltet, innerhalb spezifizierten Betriebstemperatur- und Feuchtebereichs)
Temperaturcharakteristik	Innerhalb ±0,1% f.s./ ˚C (außer 23 ±5°C)
Einfluss magnetischer Felder	Innerhalb ±1,5% f.s. (in magn. Feld von 400 A/m eff AC, 50/60 Hz)
Einfluss strahlender radiofrequenter elektromagn. Felder	Innerhalb ±5% f.s. für Spannung und Wirkleistung bei 10 V/m
Scheinleistung	±1 dgt. für die Berechnung von jedem Messwert addieren
Blindleistung	Berechnung der Grundschwingung ±2,0% rdg. ±3,0% f.s. + Genauigkeit der Stromzange (Leistungsfaktor = 1)
	Effektivwert-Berechnung (RMS) ±1 dgt. für die Berechnung addieren
Energie	Genauigk. der Wirk- und Blindleistungsmessung ±1 dgt.
Leistungsfaktor	±1 dgt. für die Berechnung addieren
Frequenz	±0,5% rdg. (Sinus-Eingang 90 bis 520 V)
Verbrauchswert	Genauigk. der Wirk- und Blindleistungsmessung ±1 dgt.
Verbrauchsmenge	Genauigk. der Wirk- und Blindleistungsmessung ±1 dgt.

*1 Für die 9694-Stromzange liegt der garantierter Genauigkeitsbereich zwischen 500 mA und 5 A, und für die 9695-02 - zwischen 500 mA und 50 A.

*2 Für die 9660 und 9695-03-Stromzangen liegt der garantierter Genauigkeitsbereich zwischen 5 A bis 100 A und für die 9661 - zwischen 5 A und 500 A.

Strom-Anzeige und effektiver Messbereich typisch

	Messbereich	Gesamter Anzeigebereich	Effektiver Messbereich		Anzeigebereich	Effektiver Spitzenwert
		Minimum	Minimum	Maximum	Maximum	Messbereich
Spannung	400V Messbereich	5,0V	90,0V	520,0V	520,0V	±750V$_{Spitze}$
Strom	5A Messbereich	0,0200A	0,2500A	5,5000A	6,5000A	±20A$_{Spitze}$
	10A Messbereich	0,040A	0,500A	11,000A	13,000A	±40A$_{Spitze}$
	50A Messbereich	0,200A	2,500A	55,000A	65,000A	±200A$_{Spitze}$
	100A Messbereich	0,40A	5,00A	110,00A	130,00A	±400A$_{Spitze}$
	500A Messbereich	2,00A	25,00A	550,00A	650,00A	±1000A$_{Spitze}$

ENERGIE-LOGGER 3365-20(PW)

Zubehör

SICHERHEITS-SPANNUNGSSENSOR 9020(PW) (1 Satz)
AC-NETZTEIL 1008(Z) (1)
USB-Kabel (1)

Bedienungsanleitung (1)
Messanleitung (1)
Spiralschlauch für Kabel (1 Satz : rot, gelb, blau/je 4 Stück)
Spiralschlauch für Kabelzusammenfassung (10)



Der **Energie-Logger 3365-20(PW)** kann Strom- und Leistungsmessungen nur in Verbindung mit passenen Stromzangen durchführen, die zusätzlich bestellt werden müssen.

Optionen

STROMZANGEN (für Laststrom-Messungen)


STROMZANGE	9694	(5A AC)
STROMZANGE	9660	(100A AC)
STROMZANGE	9661	(500A AC)
STROMZANGE	9669	(1000A AC)
FLEXIBLER STROMSENSOR	9667(CT)	(5000A AC)
STROMZANGE *	9695-02	(50A AC)
STROMZANGE *	9695-03	(100A AC)
ANSCHLUSSKABEL	9219	(Anschluss an 9695-02, 9695-03)

* Bei der Bestellung der Stromzangen 9695-02 und 9695-03 wird der Kauf des 9219 Anschlusskabels empfohlen.

ABLEITSTROMZANGEN (für Ableitstrom-Messungen)

ABLEITSTROMZANGE	9657-10
ABLEITSTROMZANGE	9675


ADAPTER-STROMZANGE 9290-10

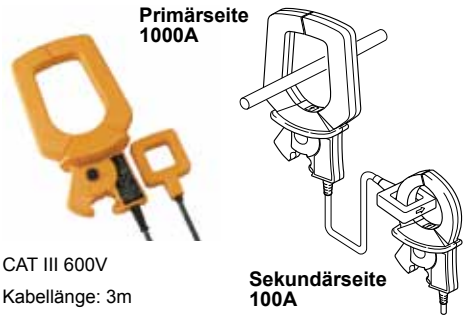

CAT III 600V
Kabellänge: 3m

Maximaler Leiterdurchmesser
Ø55 mm
Busschiene : 80 mm 520 mm
CT-Verhältnis : 10:1
MAX. 1500A AC (kontinuierlich: 1000A)

POWER LOGGER VIEWER 1001(SF)

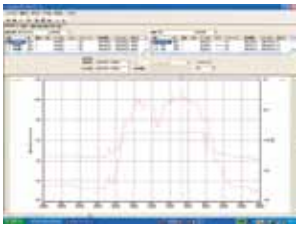

Unterstützte Betriebssysteme

Windows 8 (32/64bit)
Windows 7 SP1 oder höher (32/64bit)
Windows Vista SP2 oder höher (32bit)
Windows XP SP3 oder höher (32bit)

Trendgraph-Anzeige
Gesamtanzeige
Signalverlaufsanzeige
Druck-Funktion
Ausdruck der Berichte

AKKUSATZ 9002(PW)



Akkusatz mit Box

AKKUSATZ 9459
als Ersatzakku-Set

SICHERHEITSSENSOR 9020(PW)



3365-20(PW) wird mit 4 Stromzangen geliefert. Zusätzliche Stromzangen können bestellt werden. Kabellänge: 3m

TRAGETASCHE 1005(C)/1008(C)



	1005(C)	1008(C)
Maße :	390 B	390 B
(ca.)	275 H	275 H
	110 T mm	150 T mm

AC-NETZTEIL 1008(Z)



bei Bestellung angeben

SD-SPEICHERKARTE 2GB



Speichern von Messdaten über die Zeitdauer von 1 Jahr mit 1 Min. Intervall.

LAN-KABEL 9642



Das Gerät darf ausschließlich von ausgebildeten Elektrofachkräften und/oder elektrotechnisch unterwiesenen Personen benutzt werden. Es darf nicht von elektrotechnischen Laien verwendet werden.

Hinweis: Alle verwendeten Produktnamen und -marken sind Marken oder registrierte Marken der jeweiligen Firma.

ASM GmbH Automation • Sensorik • Messtechnik
Am Bleichbach 18 - 24 85452 Moosinning
Tel. +49 8123 986-0 Fax: +49 8123 986-500
www.asm-sensor.de info@asm-sensor.de

© by ASM Moosinning 08/2014 Änderungen und Irrtümer vorbehalten. Schutzvermerk gemäß DIN34 beachten.
Ursprungsdatei: PW3365E1-46E vom 20.06.2014